




YAMAHA

XT600ZS


OWNER'S MANUAL

1VL-28199-1

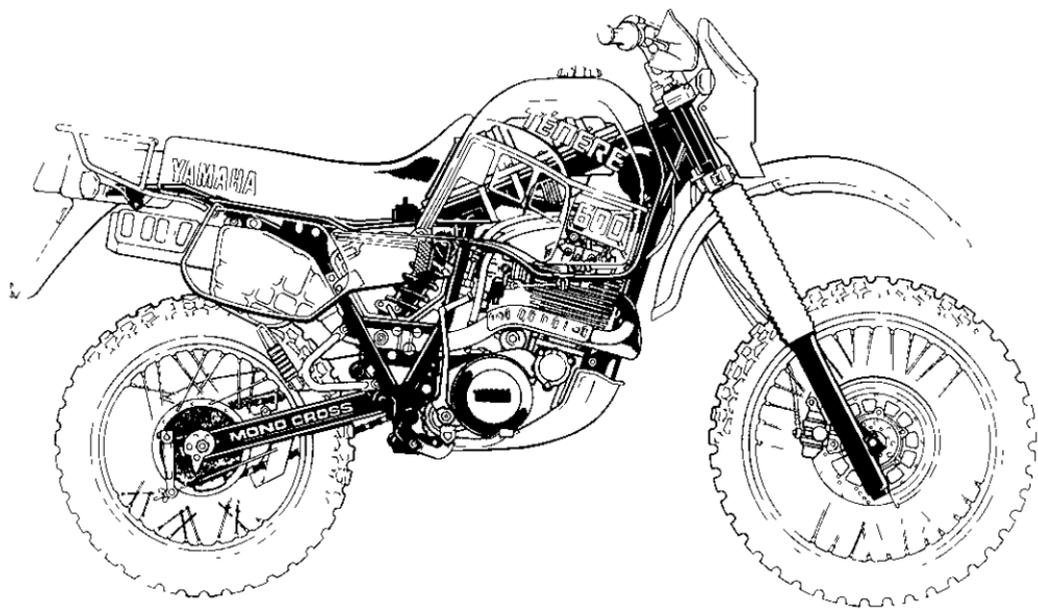

**IDENTIFICATION NUMBERS RECORD****1. KEY NUMBER:****2. FRAME NUMBER AND ENGINE NUMBER:**

Your key identification number is stamped on your key as shown in the following illustration. Record this number in the space provided for reference if you need a new key.

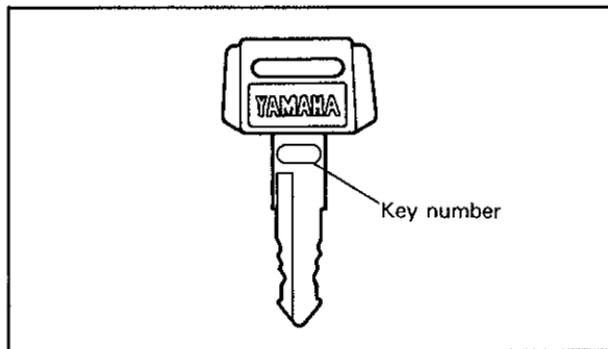

Record your frame and engine number in the spaces provided to assist you in ordering spare parts from your Yamaha dealer or for reference in case your vehicle is stolen. (See page 2-1)

A 001

**XT600ZS**

**OWNER'S MANUAL**

**©1986 by Yamaha Motor Co., Ltd.**

**1st Edition, February 1986**

**All rights reserved. Any reprinting or  
unauthorized use without the written  
permission of Yamaha Motor Co., Ltd,  
is expressly prohibited.**

**Printed in Japan**

## INTRODUCTION

Congratulations on your purchase of the Yamaha XT600ZS. This model is the result of Yamaha's vast experience in the production of fine sporting, touring, and pacesetting racing machines. It represents the high degree of craftsmanship and reliability that have made Yamaha a leader in these fields.

This manual will give you an understanding of the operation, inspection, and basic maintenance of this motorcycle. If you have any questions about the operation or maintenance of your motorcycle, please consult a Yamaha dealer.

**NOTE:** \_\_\_\_\_

Some data in this manual may become out-dated due to future improvement on this model. If you have any questions about this manual or your motorcycle, please consult a Yamaha dealer.

---

**TECHNICAL PUBLICATIONS  
SERVICE DIVISION  
MOTORCYCLE OPERATIONS  
YAMAHA MOTOR CO., LTD.**

**WARNING:** \_\_\_\_\_

**PLEASE READ THIS MANUAL CAREFULLY AND COMPLETELY BEFORE OPERATING THIS MOTORCYCLE.**

---

Particularly important information is distinguished in this manual by the following notations:

**NOTE:**

A NOTE provides key information to make procedures easier or clearer.

**CAUTION:**

A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle.

**WARNING:**

A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

U 000

**NOTE:** \_\_\_\_\_

This manual should be considered a permanent part of this motorcycle and should remain with it even if the motorcycle is subsequently sold.

---




## CONTENTS

DESCRIPTION .....	1-1	Rear shock absorber .....	3-11
MOTORCYCLE IDENTIFICATION . . .	2-1	PRE-OPERATION CHECKS . . . . .	4-1
Frame serial number .....	2-1	Brakes .....	4-3
Engine serial number .....	2-1	Brake fluid leakage (Front) . . . . .	4-4
CONTROL FUNCTIONS .....	3-1	Clutch .....	4-4
Main switch .....	3-1	Throttle grip .....	4-4
Indicator lights .....	3-2	Engine oil .....	4-4
Speedometer .....	3-3	Chain .....	4-5
Tachometer . . . . .	3-3	Tires .....	4-5
Handlebar switches . . . . .	3-4	Wheels .....	4-9
Clutch lever .....	3-5	Fittings/Fasteners .....	4-9
Change pedal . . . . .	3-5	Lights and signals .....	4-9
Front brake lever .....	3-6	Switches .....	4-9
Rear brake pedal .....	3-6	Battery .....	4-9
Fuel cock .....	3-6	Fuel . . . . .	4-10
Starter knob . . . . .	3-7	OPERATION AND IMPORTANT	
Kick starter . . . . .	3-7	RIDING POINTS . . . . .	5-1
Steering lock . . . . .	3-8	Starting a cold engine .....	5-2
Helmet holder. . . . .	3-9	Engine warm up .....	5-3
Seat .....	3-9	Starting a warm engine . . . . .	5-3
Front forks .....	3-10	Shifting .....	5-4



Taillight bulb replacement . . . . .	6-44
Front wheel removal . . . . .	6-45
Front wheel installation . . . . .	6-46
Rear wheel removal . . . . .	6-48
Rear wheel installation . . . . .	6-49
Troubleshooting . . . . .	6-50
Troubleshooting chart . . . . .	6-51
CLEANING AND STORAGE . . . . .	7-1
A. Cleaning . . . . .	7-1
B. Storage . . . . .	7-2
SPECIFICATIONS . . . . .	8-1
NOISE REGULATION (For Australia) . . . . .	9-1
WIRING DIAGRAM . . . . .	10-1

## DESCRIPTION

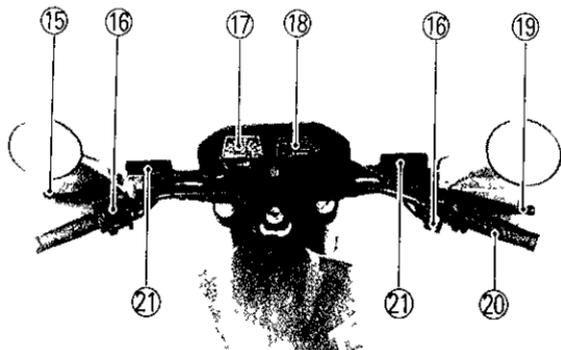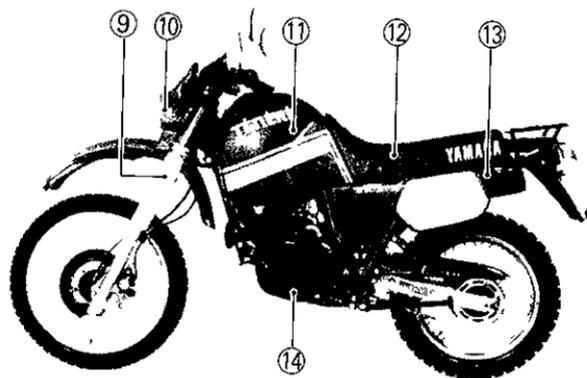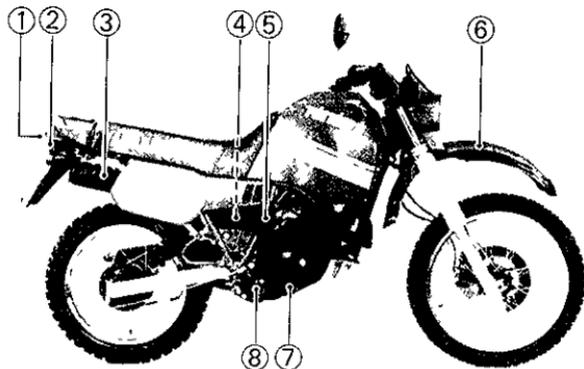

- |    |                      |    |                     |
|----|----------------------|----|---------------------|
| 1  | Taillight            | 12 | Seat                |
| 2  | Rear flasher light   | 13 | Helmet holder       |
| 3  | Silencer             | 14 | Change pedal        |
| 4  | Monocross suspension | 15 | Clutch lever        |
| 5  | Kick starter         | 16 | Handlebar switch    |
| 6  | Front fender         | 17 | Speedometer         |
| 7  | Brake pedal          | 18 | Tachometer          |
| 8  | Footrest             | 19 | Brake lever         |
| 9  | Front fork           | 20 | Throttle grip       |
| 10 | Headlight            | 21 | Front flasher light |
| 11 | Fuel tank            |    |                     |

U 002

### NOTE:

The motorcycle you have purchased may differ slightly from those shown in the photographs.


A 600

## MOTORCYCLE IDENTIFICATION

A-602

### Frame serial number

The frame serial number is stamped into the right side of the steering head pipe.

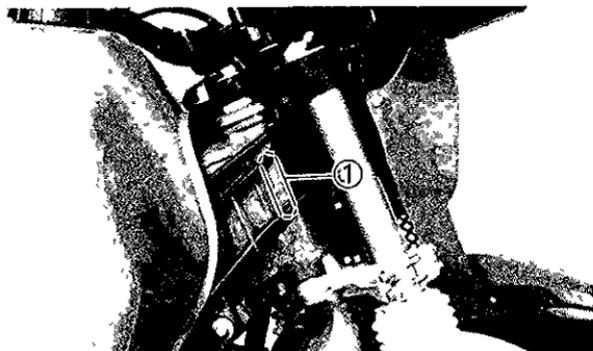


1 Frame serial number

A 701

### Engine serial number

The engine serial number is stamped into the right side of the engine.

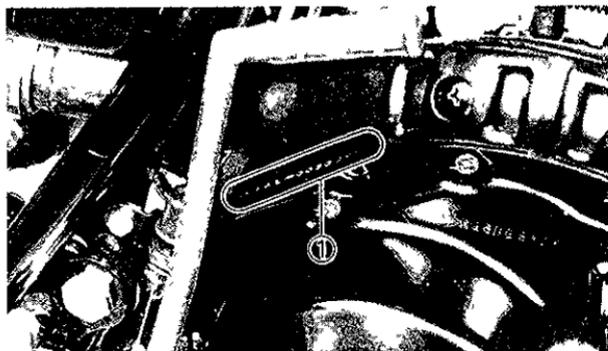

1 Engine serial number

U 003

### NOTE:

The first three digits of these numbers are for model identification; the remaining digits are the unit production number. Keep a record of these numbers for reference when ordering parts from a Yamaha dealer.


B-000

## CONTROL FUNCTIONS

B 001

### Main switch

The main switch controls the ignition and lighting systems; its operation is described below.

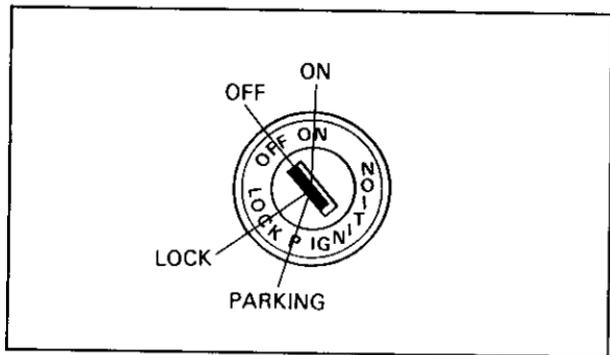

B 005

### ON

Electrical circuits are switched on. The engine can be started. The key cannot be removed in this position.

B 006

### OFF:

All electrical circuits are switched off. The key can be removed in this position.

B 007

### LOCK:

The steering is locked in this position, and all electrical circuits are switched off. The key can be removed in this position. Refer to "Steering lock" (Page 3-8) for proper operation


**PARKING:**

The steering is locked in this position, and the taillight and auxiliary light come on but all other circuits are off. The key can be removed in this position.

**NOTE:** \_\_\_\_\_

Always turn the main switch to "OFF" or "LOCK" and remove the key when the motorcycle is unattended.

---

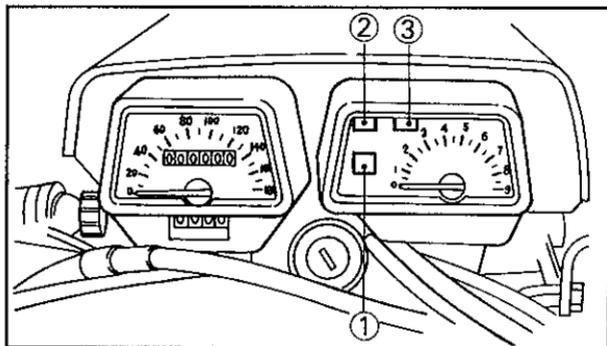**Indicator lights**

- 1 "TURN" indicator light
- 2 "HIGH BEAM" indicator light
- 3 "NEUTRAL" indicator light

"TURN" indicator light (orange).

This indicator flashes when the turn switch is "ON".

"NEUTRAL" indicator light (green):

This indicator comes on when the transmission is in neutral.

“HIGH BEAM” indicator light (blue)

This indicator comes on when the headlight high beam is used.


### Speedometer

The odometer and trip odometer are built into the speedometer. The trip odometer can be reset to “0” with the reset switch.

Use the odometer to estimate how far you can ride on a tank of fuel before going to “RESERVE”. This information will enable you to plan fuel stops in the future.

### Tachometer

This model is equipped with a tachometer so the rider can monitor the engine speed and keep it within the ideal power range.

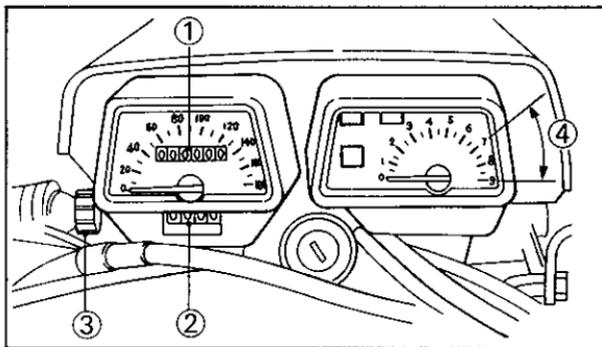


- |                |                 |
|----------------|-----------------|
| 1 Odometer     | 2 Trip odometer |
| 3 Reset switch | 4 Red zone      |



**Do not operate in the red zone.**  
**Red zone: 7,000 r/min and above**

## Handlebar switches:

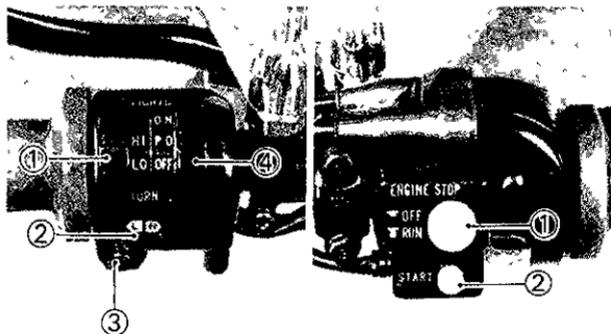

- |                            |                        |
|----------------------------|------------------------|
| 1 "LIGHTS" (Dimmer) switch | 1 "ENGINE STOP" switch |
| 2 "TURN" switch            | 2 "START" switch       |
| 3 "HORN" switch            |                        |
| 4 "LIGHTS" switch          |                        |

### "LIGHTS" (Dimmer) switch

Turn the switch to "HI" for the high beam and to "LO" for the low beam.

### "TURN" signal switch

This is a three-way switch: the center position is off; turn to the "L" to turn on the left flasher and to the "R" for the right flasher. Be sure to turn the switch off after completing a turn.

### "HORN" switch

Press the switch to sound the horn.

### "LIGHTS" switch

Turn the light switch to "ON" to turn on the headlight, taillight, and meter lights. Turn the light switch to "PO" to turn on the auxiliary light, taillight, and meter lights.

### "ENGINE STOP" switch

The engine stop switch is a safety device for use in an emergency such as when the motorcycle overturns or when trouble occurs in the throttle system. The engine will not run when the engine stop switch is turned to "OFF." In case of emergency, turn the switch to "OFF."

B 607

## “START” switch

To start the engine, push the starter.

U-307

**CAUTION:**

---

**See starting instructions prior to starting engine.**

---

B 700


## Clutch lever

The clutch lever is located on the left handlebar, and the starting circuit cutoff switch is incorporated in the clutch lever holder. Pull the clutch lever to the handlebar to disengage the clutch, and release the lever to engage the clutch. The lever should be pulled rapidly and released slowly for smooth starts. (Refer to the engine starting procedures for a description of the starting circuit cut-off switch.)

B 800

## Change pedal

The gear ratios of the constant-mesh 5-speed transmission are ideally spaced. The gears can be shifted by using the change pedal on the left side of the engine.

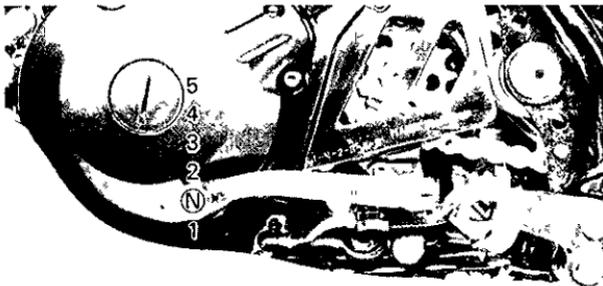

N Neutral

### Front brake lever


The front brake lever is located on the right handlebar. Pull it toward the handlebar to activate the front brake.

### Rear brake pedal

The rear brake pedal is on the right side of the motorcycle. Press down on the brake pedal to activate the rear brake.

### Fuel cock

The fuel cock supplies fuel from the tank to carburetor while filtering the fuel. The fuel cock has the three positions:

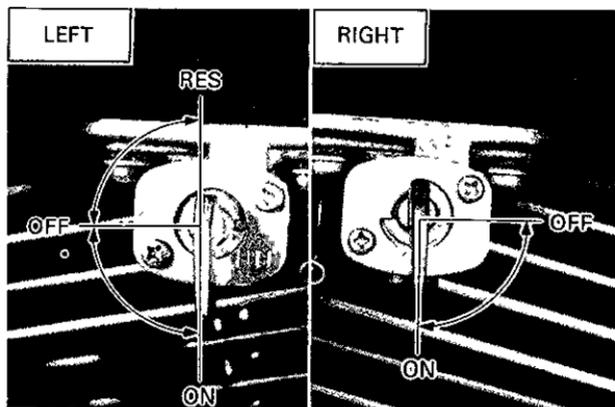

- OFF:** With the lever in this position, fuel will not flow. Always return the lever to this position when the engine is not running.
- ON:** With the lever in this position, fuel flows to the carburetor. Normal riding is done with the lever in this position.
- RES:** This indicates reserve. If you run out of fuel while riding, move the lever to this position. **FILL THE TANK AT THE FIRST OPPORTUNITY. BE SURE TO SET THE LEVER TO "ON" AFTER REFUELING.**


**NOTE:** \_\_\_\_\_

The fuel cocks are on the right and left sides of the fuel tank. Both cocks should be set to the same position.


---

**Starter knob (CHOKE)**

When cold, the engine requires a richer air-fuel mixture for starting. A separate starter circuit supplies this mixture. Pull the starter knob up to open the circuit for starting. When the engine has warmed up, push the knob down to close the circuit.

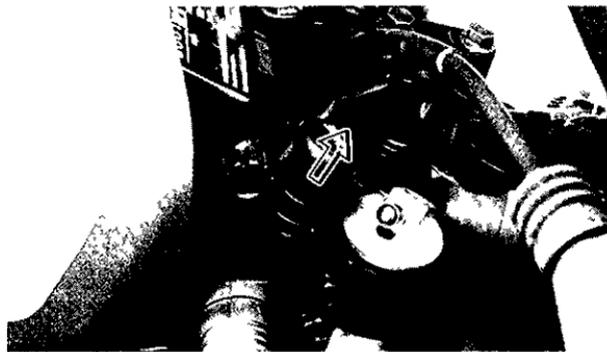**Kick starter**

Rotate the kick starter away from the engine. Push the starter down lightly with your foot until the gears engage, then kick smoothly and forcefully to start the engine. This model has a primary-coupled kick starter so the engine can be started in any gear if the clutch is disengaged. In normal practice, however, shift to neutral before starting.

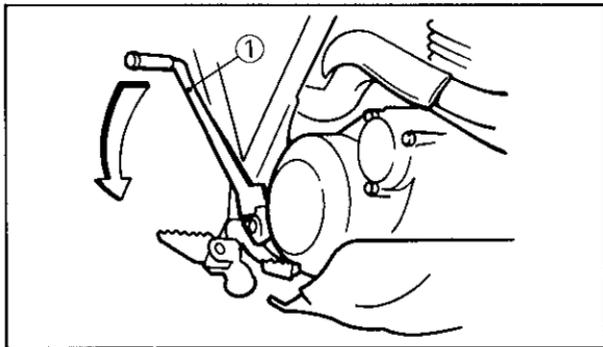

1 Kick starter

**NOTE:**

This model features an autodecomp. device, which frees the operator from the trouble otherwise required.

C-300



**Steering lock**

The steering is locked when the main switch is turned to "LOCK." To lock the steering, turn the handlebars all the way to the left or right. With the key at "OFF," push it into the main switch, turn the key counterclockwise to "LOCK," and remove the key. To release the lock, turn the key clockwise.

U 614

**WARNING:**


Never turn the key to "LOCK" when the motorcycle is moving.

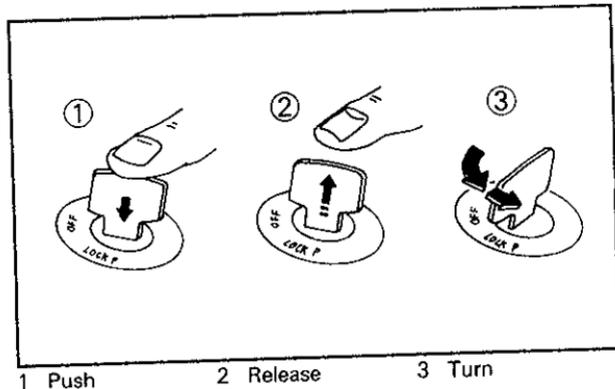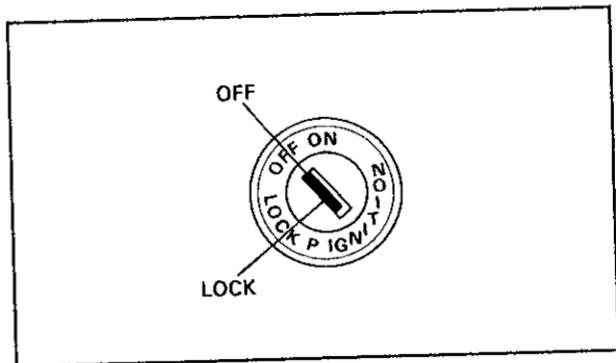

## Helmet holder

To open the helmet holder, insert the key in the lock and turn it as shown.

To lock the helmet holder, replace the holder in its original position.

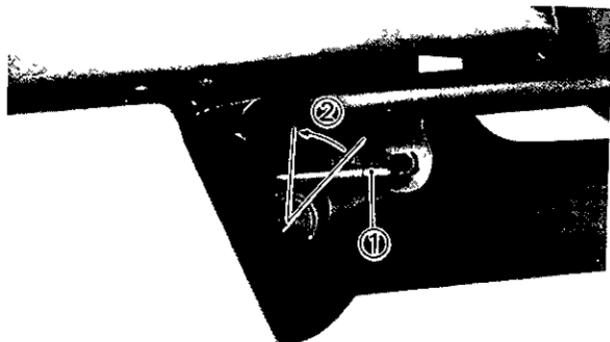

1 Helmet holder

2 Open

## WARNING:


**Never ride with a helmet in the helmet holder. It could interfere with rear wheel movement, causing loss of control and possibly an accident.**

## Seat



To open the seat, open the helmet holder and seat lock. In reinstalling the seat, insert the lobes on the seat front into the receptacles on the frame, then push down the seat at the rear. After making sure the seat is securely fitted, place the helmet holder and seat lock in its original position.

## Front forks

The front forks of this model are pneumo-mechanical; namely, a combination air and mechanical coil spring in the inner tubes. By adjusting the air pressure, you can alter the suspension to suit the motorcycle's load and the operating conditions. Refer to page 6-32 for proper adjustment procedures.

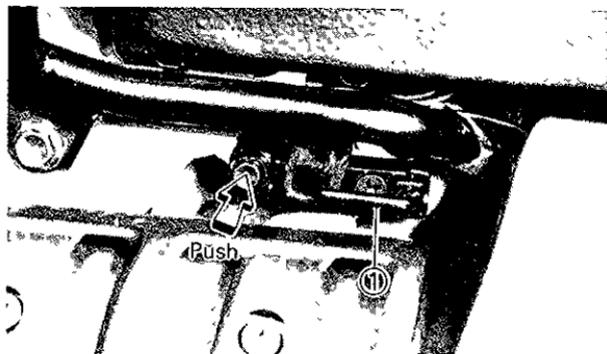

1 Seat lock

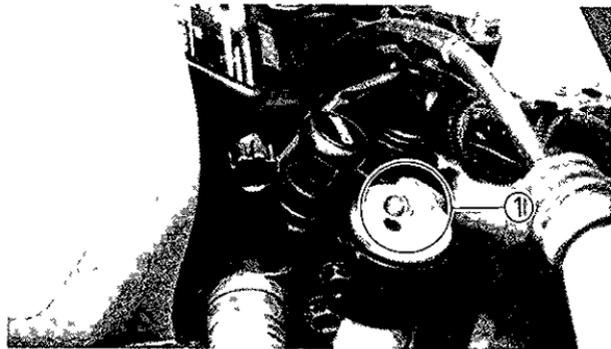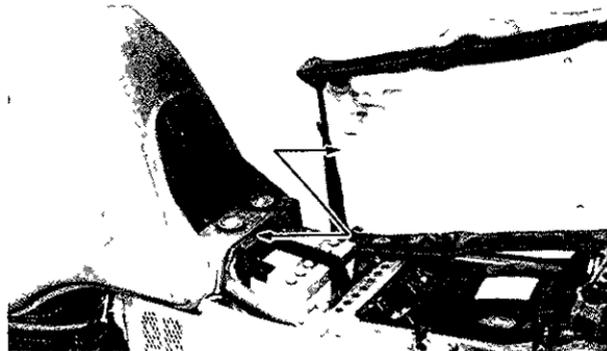

1 Air valve

## Rear shock absorber

The spring preload and the damping of the rear shock absorber can be adjusted to suit motorcycle's load (ex: optional accessories etc.) and riding conditions. Refer to page 6-35 for proper adjustment procedures.



1 Spring preload adjuster    2 Damping adjuster

## PRE-OPERATION CHECKS

Before using this motorcycle, check the following points:

Item	Routine	Page
Front brake	Check operation, free play, fluid level, and fluid leakage Top-up with DOT #3 brake fluid if necessary	4-3 ~ 4-4 6-16 ~ 6-22
Rear brake	Check operation, condition and free play. Adjust if necessary.	
Clutch	Check operation, condition and free play. Adjust if necessary	4-4, 6-22 ~ 6-23
Throttle grip/Housing	Check for smooth operation. Lubricate/Adjust if necessary.	4-4, 6-13 ~ 6-14, 6-26
Engine oil	Check oil level/Add oil as required.	4-4 ~ 4-5, 6-6 ~ 6-10
Drive chain	Check chain tension and condition Adjust if necessary	4-5, 6-23 ~ 6-25
Wheels/Tires	Check tire pressure, wear, damage, spoke tightness.	4-5 ~ 4-9
Control/Meter cables	Check for smooth operation. Lubricate if necessary	6-26
Brake and change pedal shafts	Check for smooth operation Lubricate if necessary	6-26
Brake and clutch lever pivots	Check for smooth operation. Lubricate if necessary	6-27
Sidestand pivot	Check for smooth operation Lubricate if necessary	6-27

Item	Routine	Page
Fittings/Fasteners	Check all chassis fittings and fasteners Tighten/Adjust, if necessary	4-9, 6-5
Fuel tank	Check fuel level/top-up as required	4-10
Lights and signals	Check for proper operation	4-9, 6-41 ~ 6-44
Battery	Check fluid level, top-up with distilled water if necessary	4-9, 6-37 ~ 6-40

**NOTE:**

Pre-operation checks should be made each time the motorcycle is used. Such an inspection can be thoroughly accomplished in a very short time, and the added safety it assures is more than worth the time involved.

**WARNING:**

If any item in the Pre-Operation Check is not working properly, have it inspected and repaired before operating the motorcycle.

**Brakes (See page 6-16 for more detail)**

## 1. Brake lever and brake pedal

Check for correct free play in the front brake lever and rear brake pedal. Make sure they are working properly. Check the brakes at low speed shortly after starting out. If the free play is incorrect, adjust it.

U 623

**WARNING:**

**A soft, spongy feeling in the brake lever indicates a failure in the brake system. Do not operate the motorcycle until the failure in the brake system is corrected. Ask a Yamaha dealer for immediate repairs. A soft, spongy feeling could indicate a hazardous condition in the brake system.**

## 2. Brake fluid

Check the brake fluid level.  
Add fluid if necessary.

Recommended brake fluid: DOT #3

## 3. Check the disc pads.

Refer to page 6-20.

## 4. Check the brake shoes.

Refer to page 6-20.

U 022

**NOTE:**

When this brake service is necessary, ask a Yamaha dealer.

E 113

### **Brake fluid leakage (Front)**

Apply the brake for a few minutes. Check to see if any brake fluid leaks out from the pipe joints or the master cylinder.

U-625

### **WARNING:**

**If brake fluid leakage is found, ask a Yamaha dealer for immediate repairs. Such leakage could indicate a hazardous condition.**

E-200

### **Clutch (See page 6-22 for more detail)**

Check the free play in the clutch lever, and make sure the lever operates properly. If the free play is incorrect, adjust it.

E-301

### **Throttle grip (See page 6-13 for more detail)**

Turn the throttle grip to see if it operates properly, and check the free play. Make sure the grip returns by spring force when released. Ask a Yamaha dealer to make any necessary adjustments.

E 408

### **Engine oil (See page 6-6 for more detail)**

Make sure the engine oil is at the specified level. Add oil as necessary.

Recommended oil:

SAE 20W40 type SE motor oil

Oil capacity:

Total:

2.4 L (2.1 Imp qt, 2.5 US qt)

Periodic oil change:

1.9 L (1.7 Imp qt, 2.0 US qt)

With oil filter replacement:

2.0 L (1.8 Imp qt, 2.1 US qt)

Oil tank capacity:

1.6 L (1.4 Imp qt, 1.7 US qt)

U-080

**NOTE:** \_\_\_\_\_

Recommended engine oil classification; API Service "SE", "SF" type or equivalent (e.g. "SF-SE", "SF-SE-CC", "SF-SE-SD" etc.).

---

E-500

**Chain (See page 6-23 for more detail)**

Check the general condition of the chain and check the chain slack before every ride. Lubricate and adjust the chain as necessary.

E 913

**Tires**

To ensure maximum performance, long service, and safe operation, note the following:

1. Tire air pressure

Always check and adjust the tire pressure before operating the motorcycle.

**WARNING:**

**Tire inflation pressure should be checked and adjusted when the temperature of the tire equals the ambient air temperature. Tire inflation pressure must be adjusted according to total weight of cargo, rider, passenger, and accessories (fairing, saddlebags, etc. if approved for this model), and vehicle speed.**

Basic weight With oil and full fuel tank	175 kg (386 lb)	
Maximum load*	313 kg (690 lb)	
Cold tire pressure	Front	Rear
Up to 252 kg (556 lb) load*	147 kPa (1.5 kg/cm <sup>2</sup> , 22 psi)	147 kPa (1.5 kg/cm <sup>2</sup> , 22 psi)
252 kg (556 lb) ~ Maximum load*	147 kPa (1.5 kg/cm <sup>2</sup> , 22 psi)	177 kPa (1.8 kg/cm <sup>2</sup> , 26 psi)
Off-road riding	98 kPa (1.0 kg/cm <sup>2</sup> , 14 psi)	98 kPa (1.0 kg/cm <sup>2</sup> , 14 psi)
High speed riding	147 kPa (1.5 kg/cm <sup>2</sup> , 22 psi)	147 kPa (1.5 kg/cm <sup>2</sup> , 22 psi)


\*Load is the total weight of cargo, rider, passenger, and accessories

**WARNING:**

Proper loading of your motorcycle is important for the handling, braking, and other performance and safety characteristics of your motorcycle. Do not carry loosely packed items that can shift. Securely pack your heaviest items close to the center of the motorcycle, and distribute the weight evenly from side to side. Properly adjust the suspension for your load, and check the condition and pressure of your tires. **NEVER OVERLOAD YOUR MOTORCYCLE.** Make sure the total weight of the cargo, rider, passenger, and accessories (fairing, saddlebags, etc. if approved for this model) does not exceed the maximum load of the motorcycle. Operation of an overloaded motorcycle could cause tire damage, an accident, or even injury.

## 2. Tire inspection

Always check the tires before operating the motorcycle. If a tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the side wall is cracked, contact a Yamaha dealer immediately and have him replace the tire.

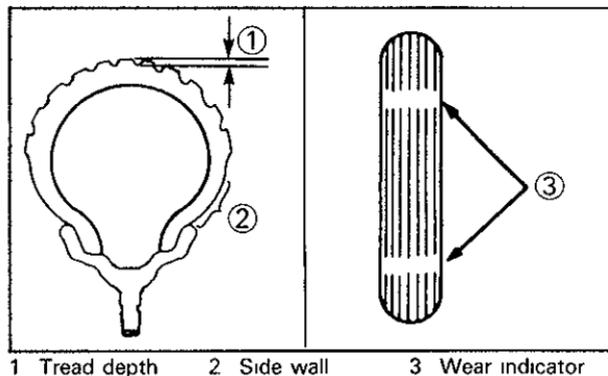

## FRONT

Manufacture	Size	Type
Bridgestone	3 00S21-4PR	TW25
Dunlop	3 00S21-4PR	K850A

## REAR

Manufacture	Size	Type
Bridgestone	4 60S18-4PR	TW26
Dunlop	4 60S18-4PR	K850A

Minimum tire tread depth (front and rear)	1.0 mm (0.04 in)
---	------------------

**WARNING:**

1. It is dangerous to ride with a worn-out tire. When a tire tread begins to show lines, have a Yamaha dealer replace the tire immediately. Brakes, tires, and related wheel parts replacement should be left to a Yamaha Service Technician.
2. Patching a punctured tube is not recommended. If it is absolutely necessary to do so, use great care and replace the tube as soon as possible with a good quality replacement.

## Wheels

To ensure maximum performance, long service, and safe operation, note the following:

1. Always inspect the wheels before a ride. Check for cracks, bends, or warpage of the wheel; be sure the spokes are tight and undamaged. If any abnormal condition exists in a wheel, consult a Yamaha dealer. Do not attempt even small repairs to the wheel. If a wheel is deformed or cracked, it must be replaced.
2. Tires and wheels should be balanced whenever either one is changed or replaced. Failure to have a wheel balanced can result in poor performance, adverse handling characteristics, and shortened tire life.
3. After installing a tire, ride conservatively to allow the tire to seat itself on the rim properly. Failure to allow proper seating may cause tire failure, resulting in damage to the motorcycle and injury to the rider.

## Fittings/Fasteners

Always check the tightness of chassis fittings and fasteners before a ride. Use the chart on page 6-5 to find the correct torque.

## Lights and signals

Check the headlight, flasher lights, taillight, brake light, meter lights, and all the indicator lights to make sure they are in working condition.

## Switches


Check the operation of the headlight switch, turn switch, brake light switch, horn switch, starter switch, main switch, etc.

## Battery (See page 6-37 for more detail)

Check the fluid level and top-up if necessary. Use only distilled water if refilling is necessary.

## Fuel

Make sure there is sufficient fuel in the tank

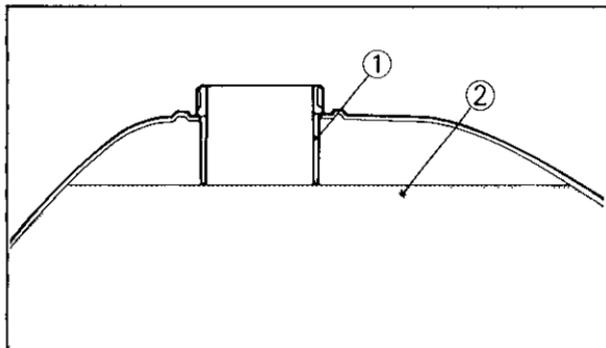

1 Filler tube

2 Fuel level

U-610

### **WARNING:**

**Do not overfill the fuel tank. Avoid spilling fuel on the hot engine. Do not fill the fuel tank above the bottom of the filler tube as shown in the illustration or it may overflow when the fuel heats up later and expands.**

Recommended fuel: Regular gasoline  
For Australia. Unleaded fuel only  
Fuel tank capacity:

Total:

23 L (5.1 Imp gal, 6.1 US gal)

Reserve:

3.2 L (0.7 Imp gal, 0.8 US gal)

## OPERATION AND IMPORTANT RIDING POINTS

U 672

**WARNING:** \_\_\_\_\_

Before riding this motorcycle, become thoroughly familiar with all operating controls and their function. Consult a Yamaha dealer regarding any control or function that you do not thoroughly understand.

---

U-628

**WARNING:** \_\_\_\_\_

1. Never start your engine or let it run for any length of time in a closed area. The exhaust fumes are poisonous and can cause loss of consciousness and death within a short time. Always operate your motorcycle in an area with adequate ventilation.
  2. Before starting out, always be sure the sidestand is up. Failure to retract the sidestand completely can result in a serious accident when you try to turn a corner.
-

## Starting a cold engine

U 028

**NOTE:** \_\_\_\_\_

This model is equipped with a starting circuit cut-off switch.

The engine can be started under the following conditions:

- a. When the transmission is in neutral. At this time the neutral indicator light (green) should be on.

If the light does not come on, ask a Yamaha dealer to inspect it.

- b. When the clutch is disengaged with the transmission in gear.
- 

- 1 Turn the fuel cock to "ON."
- 2 Turn the ignition key to "ON" and the engine stop switch to "RUN."
3. Shift transmission into neutral.

U 030

**NOTE:** \_\_\_\_\_

When the transmission is in neutral, the neutral indicator light (green) should be on. If the light does not come on, ask a Yamaha dealer to inspect it.

---

- 4 Operate the starter (CHOKE), and completely close the throttle grip.
- 5 Start the engine by pushing the starter switch or by using the kick starter.

**NOTE:** \_\_\_\_\_

If the engine fails to start, release the starter switch, wait a few seconds, then try again. Each attempt should be as short as possible to preserve the battery. Do not crank the engine more than 10 seconds on any one attempt.

If the engine does not start with the starter motor, use the kick starter to start the engine.

---

6. After the engine starts, warm it up for one or two minutes. Make sure the starter is returned to its original position before riding.

**Engine warm-up**

To ensure maximum engine life, always warm up the engine before riding your motorcycle. Never accelerate hard with a cold engine. An engine is warm if it responds normally to the throttle when the starter (CHOKE) is turned off.

**Starting a warm engine**

The starter (CHOKE) is not required when the engine is warm.

**CAUTION:** \_\_\_\_\_

**See "Break-in section" prior to operating the motorcycle for the first time.**

---

## Shifting

The transmission lets you control the amount of power you have available at a given speed for starting, accelerating, climbing hills, etc. The use of the change pedal is shown in the illustration. (Page 3-5)

To shift into NEUTRAL, depress the change pedal repeatedly until it reaches the end of its travel (you will feel a stop when you are in first gear) then raise the pedal slightly.

### CAUTION:

---

1. **Do not coast for long periods with the engine off, and do not tow the motorcycle a long distance. Even with gears in neutral, the transmission is only properly lubricated when the engine is running. Inadequate lubrication may damage the transmission.**
  2. **Always use the clutch when changing gears. The engine, transmission, and driveline are not designed to withstand the shock of forced shifting and can be damaged by shifting without the clutch.**
-

## Engine break-in

There is never a more important period in the life of your motorcycle than the period between zero and 1,000 km (600 mi). For this reason we ask that you carefully read the following material. Because the engine is brand new, you must not put an excessive load on it for the first 1,000 km (600 mi). The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full throttle operation or any condition which might result in excessive heating of the engine, must be avoided.

F-307

1. 0 ~ 150 km (0 ~ 90 mi):

Avoid operation above 4,000 r/min.

Stop the engine and let it cool for 5 to 10 minutes after every hour of operation.

Vary the speed of the motorcycle from time to time. Do not operate it at one set throttle position.

2. 150 ~ 500 km (90 ~ 300 mi):

Avoid prolonged operation above 5,000 r/min. Rev the motorcycle freely through the gears, but do not use full throttle at any time.

3. 500 ~ 1,000 km (300 ~ 600 mi):

Avoid prolonged full throttle operation. Avoid cruising speeds in excess of 6,000 r/min.

U 320

## CAUTION:

---

**After 1,000 km (600 mi) of operation, be sure to replace the engine oil and oil filter element.**

---

4. 1,000 km (600 mi) and beyond:  
Full throttle can be used.

U-387

**CAUTION:**

Never let engine speeds enter the red zone.

U 322

**CAUTION:**

If any engine trouble should occur during the break-in period, consult a Yamaha dealer immediately.

F 401

**Parking**

When parking the motorcycle, stop the engine and remove the ignition key. Turn the fuel cock to "OFF" whenever stopping the engine.

U 630

**WARNING:**

The muffler and exhaust pipe are hot. Park the motorcycle in a place where pedestrians or children are not likely to touch the motorcycle.

Do not park the motorcycle on a slope or soft ground; the motorcycle may overturn.

H 000

## PERIODIC MAINTENANCE AND MINOR REPAIR

H-004

Periodic inspection, adjustment, and lubrication will keep your motorcycle in the safest and most efficient condition possible. Safety is an obligation of the motorcycle owner. The maintenance and lubrication schedule chart should be considered strictly as a guide to general maintenance and lubrication intervals. YOU MUST TAKE INTO CONSIDERATION THAT WEATHER, TERRAIN, GEOGRAPHICAL LOCATIONS, AND A VARIETY OF INDIVIDUAL USES ALL TEND TO DEMAND THAT EACH OWNER ALTER THIS TIME SCHEDULE TO SHORTER INTERVALS TO MATCH HIS ENVIRONMENT. The most important points of motorcycle inspection, adjustment, and lubrication are explained in the following pages.

U-632


### **WARNING:**

If you are not familiar with motorcycle service, this work should be done by a Yamaha dealer.

H-101

### **Tool kit**

The service information included in this manual is intended to provide you, the owner, with the necessary information for completing some of your own preventive maintenance and minor repairs. The tools provided in the owner's tool kit are sufficient for most of these purposes; however a torque wrench is also necessary to properly tighten nuts and bolts.

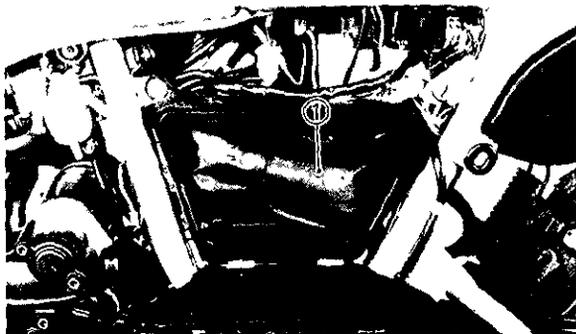

1 Tool kit

U-060

**NOTE:** \_\_\_\_\_

If you do not have a torque wrench available during a service operation requiring one, take your motorcycle to a Yamaha dealer to check the torque settings and adjust them as necessary

---

U 671

**WARNING:** \_\_\_\_\_

Modifications to this motorcycle not approved by Yamaha may cause loss of performance, and render it unsafe for use. Consult a Yamaha dealer before attempting any changes.

---

## PERIODIC MAINTENANCE/LUBRICATION

Unit. km (mi)

Item	Remarks	Break-in 1,000 (600)	EVERY	
			6,000 (4,000) or 6 months	12,000 (8,000) or 12 months
Valve clearance*	Check/Adjust valve clearance	○	○	○
Spark plug	Check/Clean/Replace if necessary	○	○	○
Air filter	Clean Replace if necessary		○	○
Carburetor*	Check/Adjust/idle speed, starter operation	○	○	○
Fuel line*	Check fuel hose for cracks or damage		○	○
Engine oil	Replace (Warm engine before draining).	○	○	○
Engine oil filter/ Oil strainer*	Replace filter element and clean oil strainer	○		○
Brake*	Check operation/fluid leakage/See NOTE / Adjust if necessary		○	○
Clutch*	Check operation/Adjust if necessary		○	○
Decompression system*	Check/Adjust if necessary		○	○
Rear arm pivot*/ Relay arm*	Check rear arm assembly for looseness Clean and lube ***	Check	○	○
Wheels*	Check balance/damage/runout/spoke tightness		○	○
Wheel bearings*	Check bearings assembly for looseness/damage Replace if damaged		○	○
Steering bearing*	Check bearing assembly for looseness Moderately repack every 24,000 (16,000) or 24 months **	Check		Check

Unit km (mi)

Item	Remarks	Break-in 1,000 (600)	EVERY	
			6,000 (4,000) or 6 months	12,000 (8,000) or 12 months
Front forks*	Check operation/oil leakage		○	○
Rear shock absorber*	Check operation/oil leakage		○	○
Drive chain	Check and adjust slack/alignment/clean/lube		Every 500 (300)	
Fittings/Fasteners*	Check all chassis fittings and fasteners	○	○	○
Battery*	Check specific gravity Check breather pipe for proper operation		○	○

\* It is recommended that these items be serviced by a Yamaha dealer

\*\* Medium weight wheel bearing grease

\*\*\* Lithium base grease


## NOTE:

### Brake fluid replacement:

- 1 When disassembling the master cylinder or caliper cylinder, replace the brake fluid. Normally check the brake fluid level and add the fluid as required.
2. On the inner parts of the master cylinder and caliper cylinder, replace the oil seals every two years.
3. Replace the brake hose every four years, or if cracked or damaged.

## Torque specifications

Use a torque wrench to tighten these items. It is recommended that these items be checked occasionally, especially before a long trip. Always check the tightness of these items whenever they are loosened for any reason.

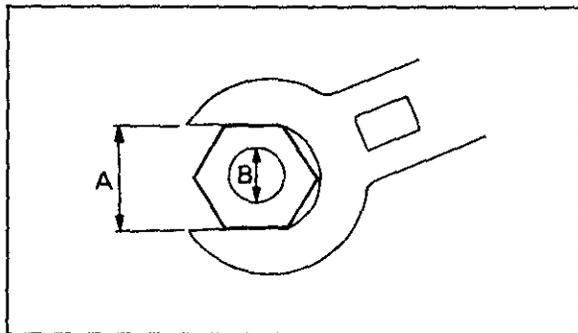

A (Nut)	B (Bolt)	General torque specifications		
		Nm	m•kg	ft•lb
10 mm	6 mm	6	0.6	4.3
12 mm	8 mm	15	1.5	11
14 mm	10 mm	30	3.0	22
17 mm	12 mm	55	5.5	40
19 mm	14 mm	85	8.5	61
22 mm	16 mm	130	13.0	94

Item	Torque		
	Nm	m•kg	ft•lb
Spark plug	17.5	1.75	12.5
Engine drain bolt (Crankcase)	30	3.0	22
(Oil tank)	18	1.8	13
Special bolt	20	2.0	14
Oil filter cover screw	10	1.0	7.2
Air bleed screw	5	0.5	3.6
Front fork pinch bolt	23	2.3	17
Front fork cap bolt	23	2.3	17
Front wheel axle nut	105	10.5	75
Axle holder nut	8	0.8	5.8
Rear wheel axle nut	105	10.5	75

## Engine oil

In this model, the dry sump lubrication system is used. That is, oil is supplied to the engine by means of the feed pump, after lubricating is over, the oil is fed back to the oil tank by means of the scavenging pump. Therefore, the oil level can be checked at the oil tank.


1. Oil level measurement
  - a. Place the motorcycle on a level place and hold it in an upright position
  - b. Remove the oil tank cap, and check the oil level.

U 078

### NOTE:

When checking, do not screw the oil level gauge into the oil tank. Insert the gauge lightly. For accuracy, check with the motorcycle held upright.

- c. If the oil level is between the minimum and maximum level lines marked on the oil level gauge, add oil up to the minimum level. If there is no oil on the oil level gauge, add oil up to the minimum level.

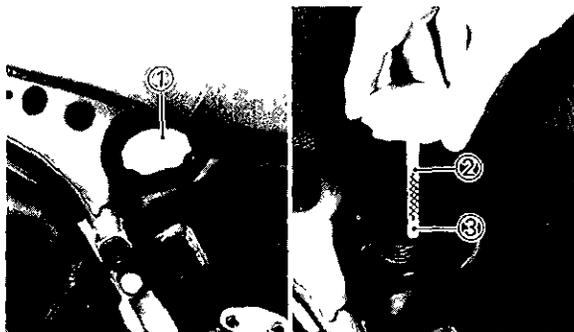

1 Oil tank cap  
3 Minimum oil level

2 Maximum oil level

- d. Start the engine and warm up until the oil temperature rises to approximately 60°C (140°F).

- e. Idle the engine more than 10 seconds while keeping the motorcycle upright. Then stop the engine and check the oil level on the upright motorcycle.
- f. Adjust the oil level to the maximum level line.

U-300

**CAUTION:** \_\_\_\_\_

**Do not run the motorcycle until you know the motorcycle has enough engine oil.**

---

U-715

**WARNING:** \_\_\_\_\_

**Never attempt to remove the oil tank cap just after high speed operation. The heated oil could spout out, causing danger. Wait until the oil cools down to approximately 60°C (140°F).**

---

## 2. Engine oil and oil filter replacement


U-402K

**CAUTION:** \_\_\_\_\_


**The replacement of engine oil should be made through the drain holes in the crankcase and the oil tank. To drain the oil, never disconnect the oil hose at the engine side, or engine damage may result.**

---

- a. Start the engine and stop after a few minutes of warm-up.
- b. Remove the engine guard.

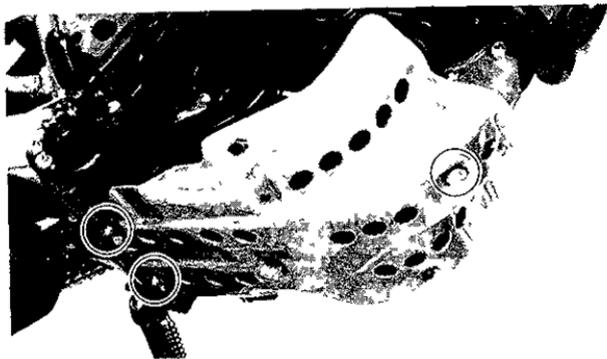

- c. Place an oil receiver under the engine.  
 d. Remove the oil tank cap, drain bolt (crankcase), filter cover screw, and air bleed screw attached to the oil filter cover

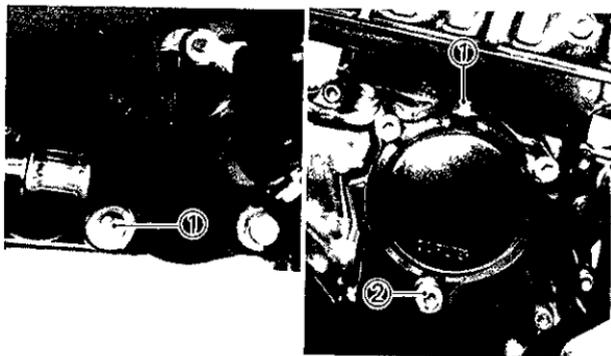

1 Drain bolt

U 068


1 Air bleed screw

2 Filter cover screw

**NOTE:** \_\_\_\_\_


The oil filter cover is secured by three screws  
 The lower one should be removed so that the filter cavity will drain.

- e. Remove the oil tank drain bolt in the following steps.
- Loosen the drain bolt.

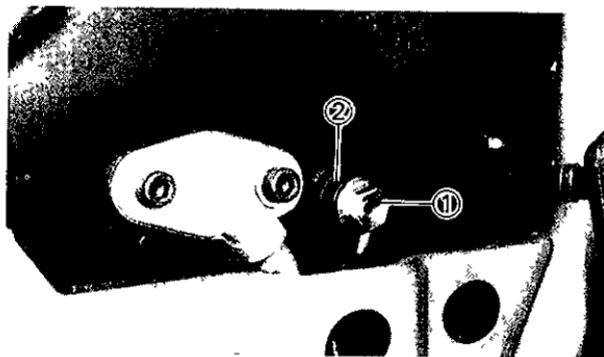


1 Drain bolt 2 Special bolt

- Loosen the special bolt as far as its groove.

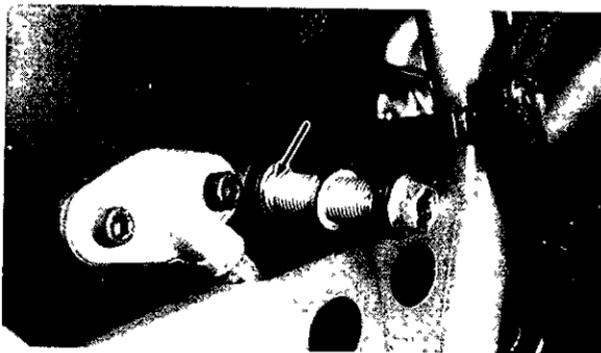

- Remove the drain bolt.

- f. Check each gasket. If damaged, replace.
- g. Remove the other filter cover screws and remove the oil filter cover. Replace the filter element. (This procedure is only required when replacing the filter element.)
- h. Check O-ring for damage. Replace if damaged.

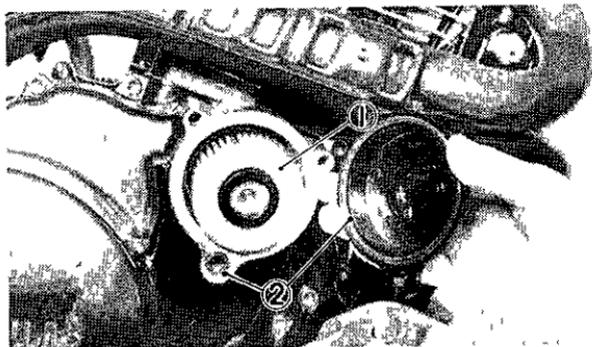

1 Filter element

2 O-ring

- i. Install the drain bolts (at two places), the air bleed screw, and the filter cover screws.

**Tightening torque:**

Drain bolt (crankcase):

30 Nm (3.0 m•kg, 22 ft•lb)

Drain bolt (oil tank):

18 Nm (1.8 m•kg, 13 ft•lb)

Special bolt:

20 Nm (2.0 m•kg, 14 ft•lb)

Filter cover screw:

10 Nm (1.0 m•kg, 7.2 ft•lb)

Air bleed screw:

5 Nm (0.5 m•kg, 3.6 ft•lb)

- j. Add engine oil. Install the oil tank filler cap and tighten.

Oil capacity: See page 4-5

Recommended oil: See page 4-5

- k. Start the engine and allow a few minutes of warm-up. While warming up, check for oil leakage. If oil leaks, stop the engine immediately, and check for the cause.
- l. Stop the engine and check the oil level.

U 377

### **CAUTION:**

---


After replacing the engine oil, be sure to check the oil pressure as described below.

1. Remove the air bleed screw from oil filter cover.
  2. Start the engine and keep it idling until oil flows out of the bleed hole. If no oil comes out after a lapse of one minute, turn off the engine immediately so it will not seize. In such a case go to the nearest Yamaha dealer for repairs.
  3. After checking, tighten the air bleed screw securely.
- 


H 629K

### **Air filter**


- 1 Remove the seat, air filter case fitting screws, and filter case cover.

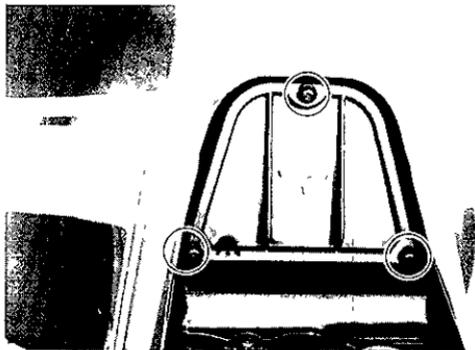

- 2 Unlock the element holder

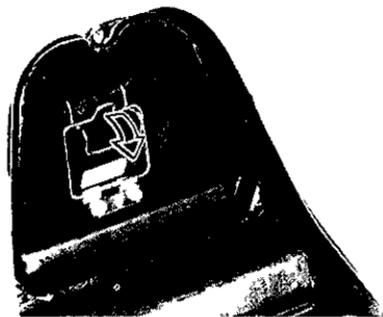

- Remove the air filter element from its case and remove the element from the guide, and clean it with solvent. After cleaning, remove the remaining solvent by squeezing the element.

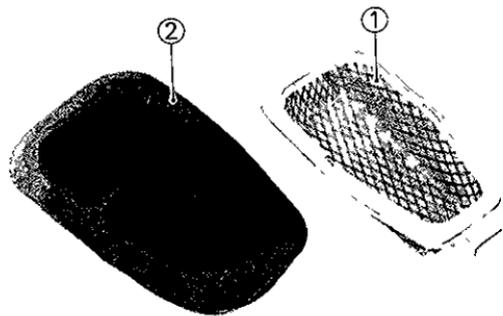

1 Element guide

2 Element

- Apply recommended oil to the entire surface of the filter and squeeze out the excess oil. The element should be wet but not dripping.

Recommended oil:

Air-cooled 2-stroke engine oil or  
SAE 10W30 motor oil

- When installing the air filter element in its case, be sure its sealing surface matches the sealing surface of the case so there is no air leak.
- The air filter element should be cleaned at the specified intervals. It should be cleaned more often if the motorcycle is operated in dusty or wet areas.

U 326

**CAUTION:**

---

**The engine should never be run without the air cleaner element; excessive piston and/or cylinder wear may result.**

---

H-900

### Carburetor adjustment

The carburetor is a vital part of the engine and requires very sophisticated adjustment. Most adjustments should be left to a Yamaha dealer who has the professional knowledge and experience to do so. However, the following point may be serviced by the owner as part of this routine maintenance.

**CAUTION:**

The carburetor was set at the Yamaha factory after many tests. If the settings are disturbed, poor engine performance and damage may result.


H-901

**Idle speed adjustment**

1. Start the engine and warm it up for a few minutes (normally, 1 or 2 minutes) at approximately 1,000 to 2,000 r/min. Occasionally rev the engine to 4,000 to 5,000 r/min.

The engine is warm when it quickly responds to the throttle.

2. Set the idle to the specified engine speed by adjusting the throttle stop screw; turn the screw in to increase engine speed, turn the screw out to decrease engine speed.

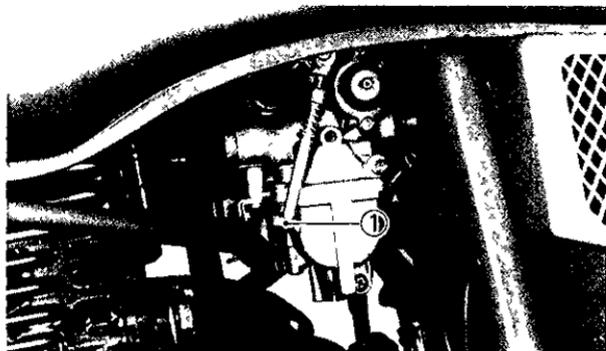

1 Throttle stop screw

Standard idle speed:  
1,250 ~ 1,350 r/min

U 045

**NOTE:**

If the specified idle speed cannot be obtained by performing the above adjustment, consult a Yamaha dealer.

## Throttle cable adjustment


U-064

**NOTE:** \_\_\_\_\_

Before adjusting the throttle cable free play, the engine idling speed should be adjusted.

---


The throttle cable should have a specified free play in the turning direction at the grip flange. If the play is incorrect, take the following steps for adjustment.

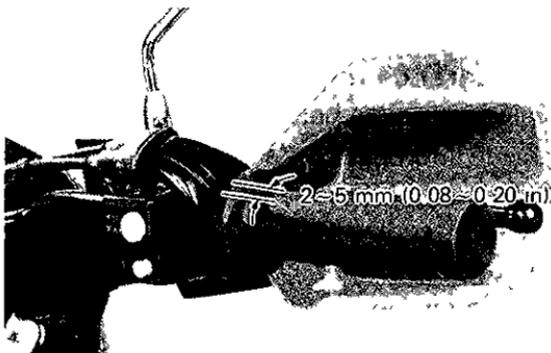

Free play:


2~5 mm (0.08~0.20 in)

1. Remove the seat.
2. Turn the fuel cock to "OFF" and remove the fuel pipe.

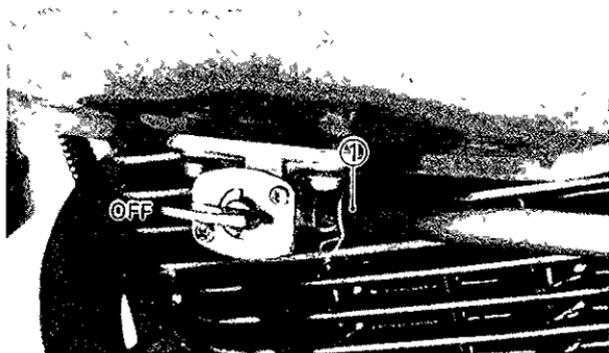


1 Fuel pipe

3. Remove the fuel tank.

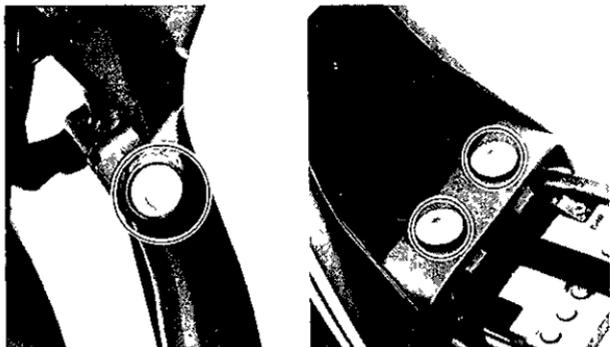

4. Loosen the lock nuts on the carburetor side of throttle cable 1, and turn the adjuster in and out so the play is correct. After the adjustment, be sure to tighten the lock nut.
5. If the play is still incorrect after the adjuster is loosened 5 mm (0.20 in), make an adjustment with the adjuster on the throttle cable 2.

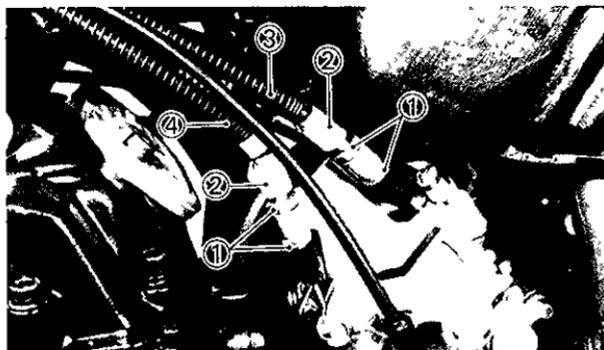

- |                    |                    |
|--------------------|--------------------|
| 1 Lock nut         | 2 Adjuster         |
| 3 Throttle cable 1 | 4 Throttle cable 2 |

H 908

### Valve clearance adjustment

The valve clearance becomes larger with use, resulting in improper fuel/air supply and engine noise. To prevent this, the valve clearance must be adjusted regularly. This adjustment, however, should be left to a professional Yamaha service technician.

## Spark plug inspection

The spark plug is an important engine component and is easy to inspect. The condition of the spark plug can indicate something of the condition of the engine.


The ideal color on the white porcelain insulator around the center electrode is a medium to light tan color for a motorcycle that is being ridden normally. Do not attempt to diagnose any problems yourself. Instead, take the motorcycle to a Yamaha dealer. You should periodically remove and inspect the spark plug because heat and deposits will cause the spark plug to slowly break down and erode. If electrode erosion becomes excessive, or if carbon and other deposits are excessive, you should replace the spark plug with a proper type plug.

Standard spark plug:  
DPR7EA-9 (NGK)

Before installing the spark plug, measure the electrode gap with a wire thickness gauge; adjust the gap to specification as necessary.

Spark plug gap:

0.8 ~ 0.9 mm (0.031 ~ 0.035 in.)

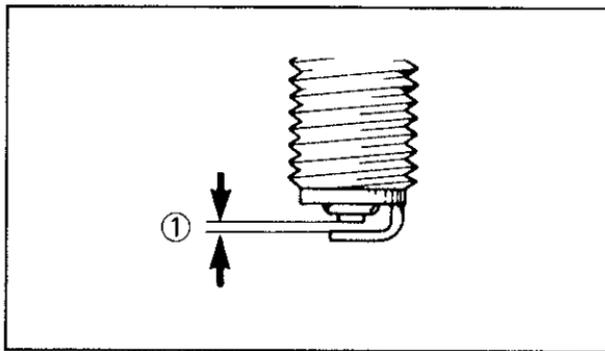

1 Spark plug gap

When installing the plug, always clean the gasket surface and use a new gasket. Wipe off any grime from the threads, and torque the spark plug properly

Spark plug torque  
17.5 Nm (1.75 m•kg, 12.5 ft•lb)

U 038

**NOTE:** \_\_\_\_\_

If a torque wrench is not available when you are installing a spark plug, a good estimate of the correct torque is 1/4 to 1/2 turns past finger tight. Have the spark plug torqued to the correct value as soon as possible with a torque wrench.


---

H 801

### Front brake adjustment

The free play at the end of the front brake lever should be 5~8 mm (0.2~0.3 in).

- 1 Loosen the lock nut.
- 2 Turn the adjuster so that the brake lever movement at the lever end is 5~8 mm (0.2~0.3 in) before the adjuster contacts the master cylinder piston.
3. After adjusting, tighten the lock nut.

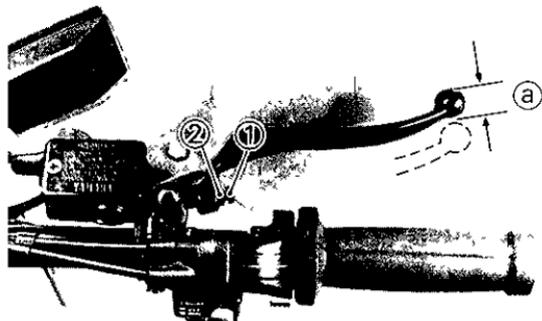

- 1 Adjuster  
a 5~8 mm (0.20~0.31 in)
- 2 Lock nut

U-636

**WARNING:**

---

**Check the brake lever free play. Be sure the brake is working properly.**

---

U 641

**WARNING:**

---

**A soft or spongy feeling in the brake lever can indicate the presence of air in the brake system. This air must be removed by bleeding the brake system before the motorcycle is operated. Air in the system will cause greatly diminished braking capability and can result in loss of control and an accident. Have a Yamaha dealer inspect and bleed the system if necessary.**

---

H-849

**Rear brake adjustment**

U-643


**WARNING:**

---

**For brake pedal adjustment, be sure to proceed as follows: (It is advisable to have a Yamaha dealer make this adjustment.)**

---

1. Pedal height.
  - a. Loosen the adjuster lock nut (for pedal height).
  - b. By turning the adjuster clockwise or counterclockwise, adjust the brake pedal position so that its top end is approx. 10 mm (0.4 in) below the top of the footrest.
  - c. Secure the adjuster lock nut.

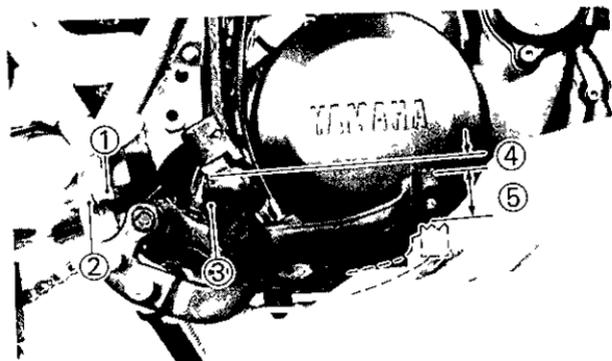

- 1 Adjuster bolt (for pedal height)    2 Lock nut  
 3 Footrest    4 Pedal height 10 mm (0.4 in)  
 5 Free play 20~30 mm (0.8~1.2 in)


U-644

**WARNING:**

After adjusting the pedal height, adjust  
 brake pedal free play.

2. Free play

The rear brake should be adjusted to suit the rider's preference; but free play at the brake pedal end must be 20~30 mm (0.8~1.2 in). Turn the adjuster on the brake rod clockwise to reduce play; turn the adjuster counterclockwise to increase play

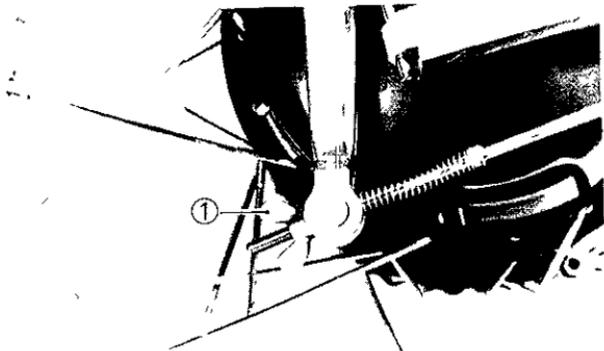

1 Adjuster


**WARNING:**

1. The rear brake pedal adjustment must be checked anytime chain is adjusted or rear wheel is removed and then reinstalled.
2. Check the operation of the brake light after adjusting the rear brake.

H 833

**Brake light switch adjustment**

The brake light switch is operated by movement of the brake pedal. To adjust, hold the main body of the switch with your hand so it does not rotate and turn the adjusting nut. Proper adjustment is achieved when the brake light comes on just before the brake begins to take effect.

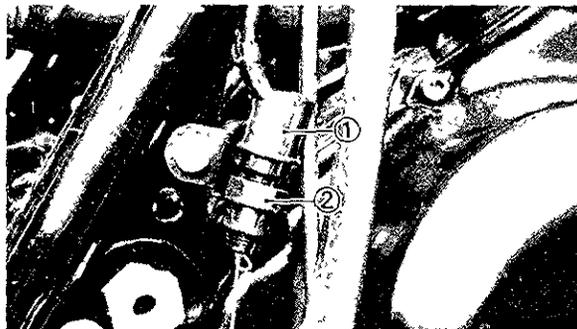

1 Main body

2 Adjuster


H 814

**Checking the front brake pads and rear brake shoes**

A wear indicator is attached to each brake to facilitate brake pad and shoe check. This indicator permits a visual check without disassembling the brake.

**FRONT**


Check the brake pads for damage and wear. If the thickness is less than the specified value, have a Yamaha dealer replace the pads.

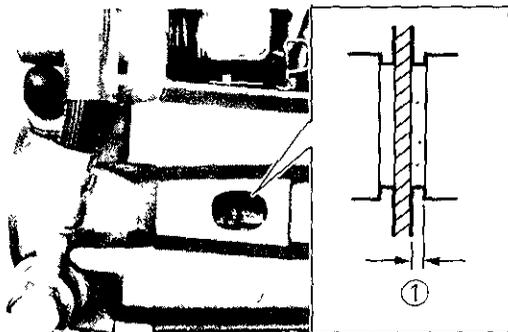

1 Wear limit 0.8 mm (0.031 in)

**REAR**

To check, look at the wear indicator while depressing the brake pedal. If the indicator reaches the wear limit line, ask a Yamaha dealer to replace the shoes.

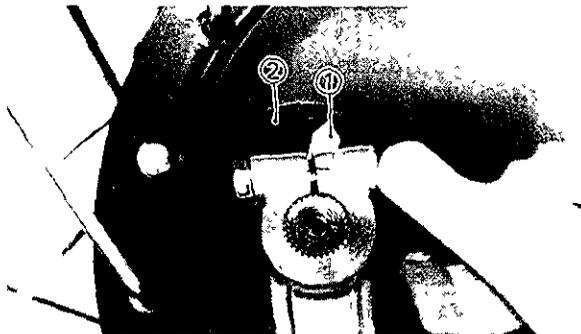


1 Wear indicator

2 Wear limit

## Inspecting the brake fluid level

Insufficient brake fluid may let air enter the brake system, possibly causing the brakes to become ineffective.

Before riding, check the brake fluid level and replenish when necessary; observe these precautions:

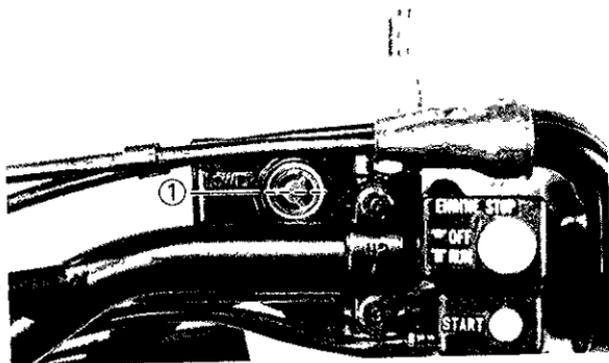

1 Lower level

1. When checking the fluid level, make sure the master cylinder top is horizontal by turning the handlebars.

2. Use only the designated quality brake fluid: otherwise, the rubber seals may deteriorate, causing leakage and poor brake performance.

Recommended brake fluids:  
DOT #3

3. Refill with the same type of brake fluid; mixing fluids may result in a harmful chemical reaction and lead to poor performance.
4. Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.
5. Brake fluid may erode painted surfaces or plastic parts. Always clean up spilled fluid immediately.
6. Have a Yamaha dealer check the cause if the brake fluid level goes down.


## Brake fluid replacement

1. Complete fluid replacement should be done only by trained Yamaha service personnel
2. Have a Yamaha dealer replace the following components when indicated in the schedule or when they are damaged or leaking
  - a. Replace all rubber seals every two years.
  - b. Replace all hoses every four years

I 009

## Clutch adjustment

This model has two clutch cable length adjusters. The cable length adjusters are used to take up slack from cable stretch and to provide sufficient free play for proper clutch operation.

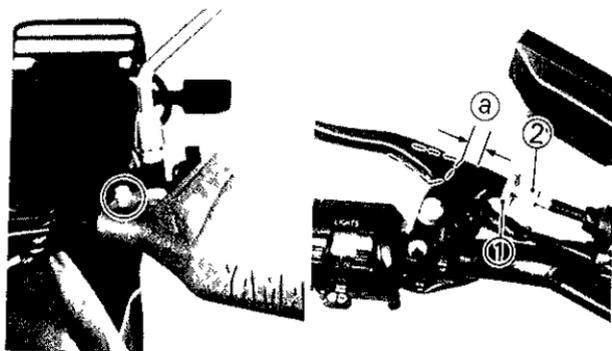

1 Lock nut 2 Adjuster a 2~3 mm (0.08~0.12 in)


I 005

## Free play adjustment

The clutch should be adjusted to suit the rider's preference; but, free play at the lever pivot should be 2~3 mm (0.08~0.12 in).

Loosen either the handlebar lever adjuster lock nut or the cable length adjuster lock nut. Turn the cable length adjuster either in or out until proper lever free play is achieved.

Clutch lever free play:  
2~3 mm (0.08~0.12 in)

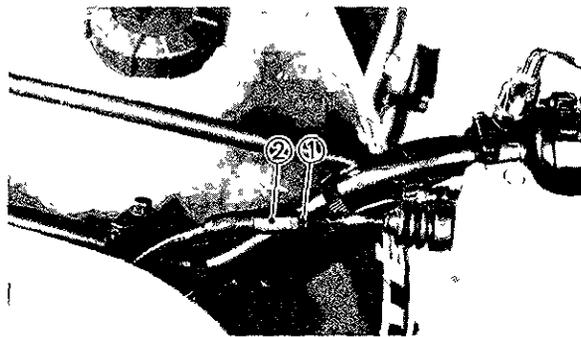

1 Lock nut

2 Adjuster

1-408


## Drive chain slack check

U-048

### NOTE:

Before checking and/or adjusting the chain slack, rotate the rear wheel through several revolutions. Check the chain slack several times to find the point where the chain is the tightest. Check and/or adjust the chain slack where the rear wheel is in this "tight chain" position.

To check the chain slack the motorcycle must stand vertically with its both wheels on the ground and without a rider. Check the slack at the position shown in the illustration. The normal vertical deflection is approximately 30~40 mm (1.2~1.6 in). If the deflection exceeds 40 mm (1.6 in) adjust the chain slack.

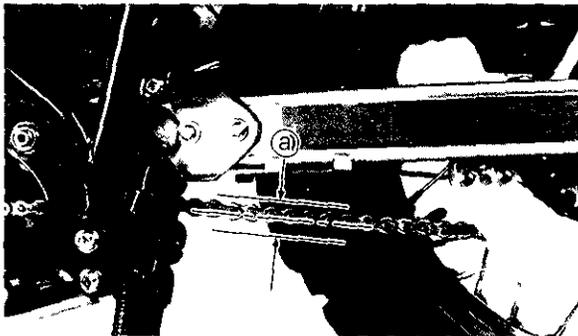

a 30~40 mm (1.2~1.6 in)


I-404

### Drive chain slack adjustment

1. Loosen the rear brake adjuster.
2. Remove the cotter pin from the rear wheel axle nut.
3. Loosen the rear wheel axle nut.
4. Turn chain puller both left and right, until axle is situated in same puller slot position

### CAUTION

Too small chain slack will overload the engine and other vital parts; keep the slack within the specified limits.

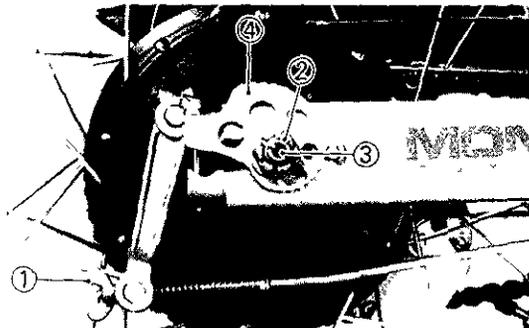


1. Adjuster 2. Axle nut 3. Cotter pin 4. Chain puller

5. After adjusting, be sure to tighten the axle nut.

Axle nut torque:

105 Nm (10.5 m•kg, 75 ft•lb)

6. Insert new cotter pin into the rear wheel axle nut and bend the end of cotter pin as shown in the illustration. (If the nut notch and cotter pin hole do not match, tighten the nut slightly to align them.)

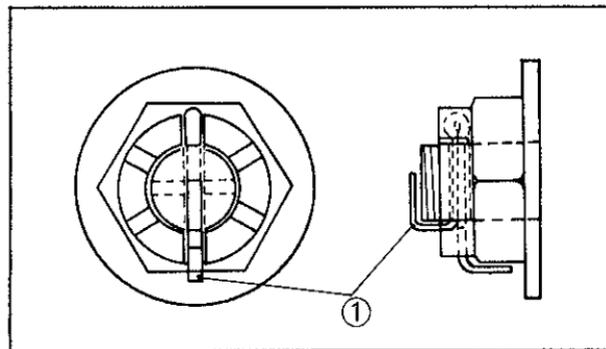

1 Cotter pin

U 647

**WARNING:**

**Always use a new cotter pin on the axle nut.**

7. Adjust the free play in the brake pedal.

U 645

**WARNING:**

**Check the operation of the brake light after adjusting the rear brake.**

I-407

**Drive chain lubrication**

The chain consists of many parts which work against each other. If the chain is not maintained properly, it will wear out rapidly, therefore, form the habit of periodically servicing the chain. This service is especially necessary when riding in dusty conditions.

This motorcycle has a drive chain with small rubber O-rings between the chain plates. Steam cleaning, high-pressure washes, and certain solvent can damage these O-rings. Use only kerosene to clean the drive chain. Wipe it dry, and thoroughly lubricate it with SAE 30 ~ 50W motor oil. Do not use any other lubricants on the drive chain. They may contain solvents that could damage the O-rings.

## Cable inspection and lubrication

U-646

### **WARNING:**

**Damage to the outer housing of the various cables may cause corrosion and interfere with the movement of the cable. An unsafe condition may result so replace such cables as soon as possible.**

Lubricate the inner cable and the cable end. If they do not operate smoothly, ask a Yamaha dealer to replace them.

Recommended lubricant:  
SAE 10W30 motor oil

## Throttle cable and grip lubrication

The throttle twist grip assembly should be greased at the time that the cable is lubricated, since the grip must be removed to get at the end of the throttle cable. Two screws clamp the throttle housing to the handlebar. Once these two are removed, the end of the cable can be held high to pour in several drops of lubricant. With the throttle grip disassembled, coat the metal surface of the grip assembly with a suitable all-purpose grease.

I 306

## Brake and change pedals

Lubricate the pivoting parts.

Recommended lubricant:  
SAE 10W30 motor oil

I-307

### Brake and clutch levers

Lubricate the pivoting parts.

Recommended lubricant:  
SAE 10W30 motor oil

I-311

### Sidestand

Lubricate the pivoting parts. Check to see that the sidestand move up and down smoothly.

Recommended lubricant:  
SAE 10W30 motor oil

U-704

### **WARNING:**


**If the sidestand movement is not smooth, consult a Yamaha dealer.**

I-313

### Rear suspension

Lubricate the pivoting parts.

Recommended lubricant:  
Lithium soap base grease

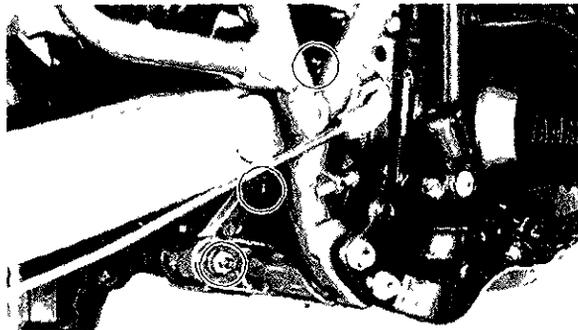


## Front fork oil change

U-649

### WARNING:

1. Fork oil leakage can cause loss of stability and safe handling. Have any problem corrected before operating the motorcycle.
2. Securely support the motorcycle so there is no danger of it falling over.


1. Elevate the front wheel by placing a suitable stand under the engine. Remove the handlebars.

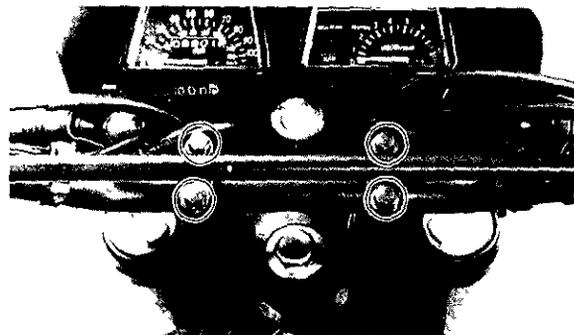

2. Remove the air valve cap from each fork.
3. Keep the valve open by pressing it for several seconds so that the air can be let out of the inner tube



- 
4. Loosen the front fork pinch bolts and remove the cap bolts from the inner fork tubes.

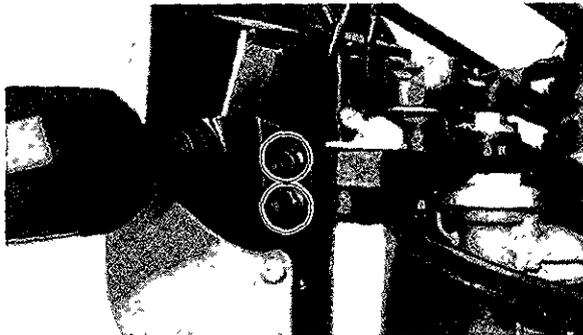

5. Place an open container under each drain hole. Remove the drain screw from each outer tube.



1 Drain screw

U-650

**WARNING:**

Do not let oil contact the disc brake components. If any oil should contact the brake components, it must be removed before the motorcycle is operated. Oil will cause diminished braking capacity and will damage the rubber components of the brake assembly.

---

6. After most of the oil has been drained, slowly pump the forks up and down to remove any remaining oil.
7. Inspect the drain screw gasket. Replace if damaged. Reinstall the drain screws.
8. Pour the specified amount of oil into each fork inner tube.

Front fork oil capacity (each fork):

507 cm<sup>3</sup> (17.8 Imp oz, 17.1 US oz)

Recommended oil:

Fork oil 20 wt or equivalent

9. After filling, slowly pump the forks up and down to distribute the oil.
10. Inspect the O-ring on the cap bolt. Replace if damaged



1 O-ring


11. Reinstall the cap bolt.

Tightening torque:

Cap bolt:

23 Nm (2.3 m•kg, 17 ft•lb)

12. If the air valve does not face as shown, loosen the pinch bolts on the under bracket and reset the forks in the following procedure:
  - a. Level the top of the inner fork tube with the top of the steering crown.
  - b. Face the air valve as shown

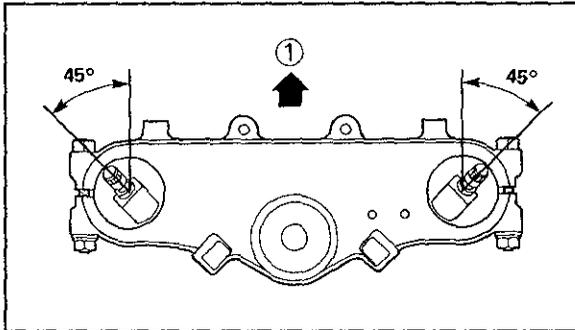

1 Forward

13. Tighten the front fork pinch bolts and install the handlebars.


U-070

**NOTE:**

The upper handlebar holder should be installed with the punched mark forward.

**CAUTION:**

First tighten the bolts on the front side of the handlebar holder, and then tighten the bolts on the rear side.

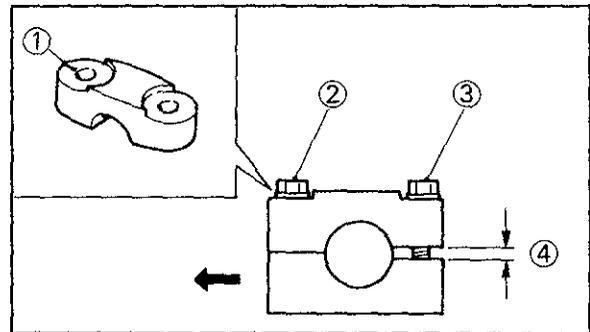

1 Punched mark 2. 1st 3 2nd 4 Gap

Tightening torque:

Front fork pinch bolt:

23 Nm (2.3 m•kg, 17 ft•lb)

Handlebar installation bolt:

20 Nm (2.0 m•kg, 14 ft•lb)

14. Fill the fork with air using an air pump or pressurized air supply. Refer to "Front fork and rear shock absorber adjustment" for proper air pressure adjusting

Maximum air pressure:

98 kPa (1.0 kg/cm<sup>2</sup>, 14 psi)

Do not exceed this amount.

I 539

## Front fork and rear shock absorber adjustment

Front fork:

U 669

### **WARNING:**

**Always adjust each fork preload to the same setting. Uneven adjustment can cause poor handling and loss of stability.**

- 1 Elevate the front wheel by placing a suitable stand under the engine.

U 050

### **NOTE:**

When checking and adjusting the air pressure, there should be no weight on the front end of the motorcycle.

2. Remove the valve cap from each fork.
3. Using the air check gauge, check and adjust the air pressure.


If the air pressure is increased, the suspension becomes stiffer, and if decreased, it becomes softer.

To increase:

Use an air pump or pressurized air supply.

To decrease:

Release the air by pushing the valve.

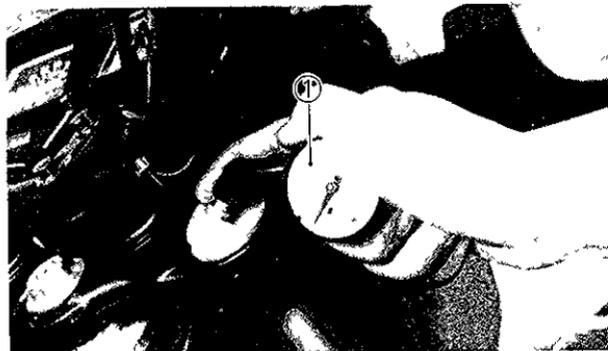

1 Air check gauge

U 051

**NOTE:** \_\_\_\_\_

An optional air check gauge is available. Please ask a nearby Yamaha dealer.

P/No. 2X4-2811A-00

---

Standard air pressure:

0 kPa (0 kg/cm<sup>2</sup>, 0 psi)

Maximum air pressure:

98 kPa (1.0 kg/cm<sup>2</sup>, 14 psi)

U 334

**CAUTION:** \_\_\_\_\_

Never exceed the maximum pressure, or oil seal damage may occur.

---

**WARNING:**

The difference between both the left and right tubes should be 9.8 kPa (0.1 kg/cm<sup>2</sup>, 1.4 psi) or less.

---

4. Install the valve caps securely.

**Rear shock (Monocross suspension "De Carbon" system)**

**WARNING:**

This shock absorber contains highly pressurized nitrogen gas. Read and understand the following information before handling the shock absorber. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling.


1. Do not tamper with or attempt to open the cylinder assembly.
  2. Do not subject shock absorber to an open flame or other high heat source. This may cause the unit to explode due to excessive gas pressure.
  3. Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.
  4. Bring your shock absorber to a Yamaha dealer for any service.
-

## Rear shock absorber adjustment

### 1. Spring

The spring preload of the rear shock absorber can be adjusted to suit rider's preference, weight, and the course conditions.

- a. Loosen the lock nut.
- b. To increase the preload, turn the adjuster clockwise. To decrease the preload, turn the adjuster counterclockwise.

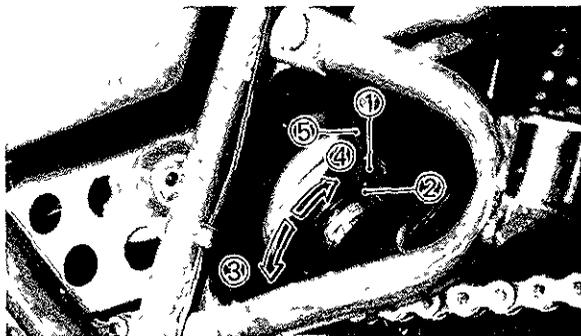

- |                           |                           |
|---------------------------|---------------------------|
| 1 Adjuster                | 2 Lock nut                |
| 3 Decrease spring preload | 4 Increase spring preload |
| 5 Special wrench          |                           |

## CAUTION:

**Never attempt to turn the adjuster beyond the maximum or minimum setting.**

- c. The length of the spring (installed) changes 1 mm (0.04 in) per turn of the adjuster.

S T D. Length	244 mm (9.6 in)
MIN Length	227 mm (8.9 in)
MAX Length	248 mm (9.8 in)

## NOTE:

When adjusting, use the special wrench which is included in the owner's tool kit.

Tightening torque:  
70 Nm (7.0 m•kg, 50 ft•lb)


U 364

**CAUTION:**

Always tighten the lock nut against the spring adjuster and torque the lock nut to specification.

2. Damping

- a. Turn the damping adjuster to increase or decrease the damping.
- b. If the damping adjuster is turned toward the "5", the damping becomes harder; if the adjuster is turned toward the "1", damping becomes softer.

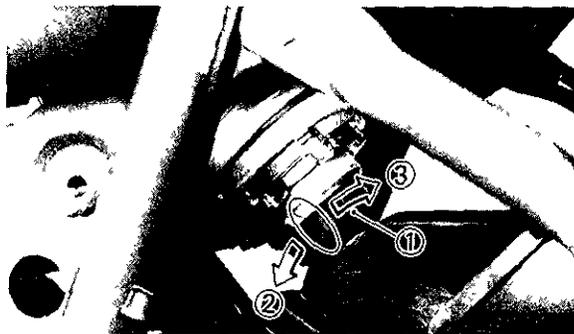

1 Damping adjuster 2 Increase 3 Decrease

	Hard			STD	Soft
Adjusting position	5	4	3	2	1

U-363

**CAUTION:**


Never attempt to turn the adjuster beyond the maximum or minimum setting.

## Steering inspection

Periodically inspect the condition of the steering. Worn out or loose steering bearings may be dangerous.

Place a block under the engine to raise the front wheel off the ground.

Hold the lower end of the front forks and try to move them forward and backward. If any free play can be felt, ask a Yamaha dealer to inspect and adjust the steering. Inspection is easier if the front wheel is removed.

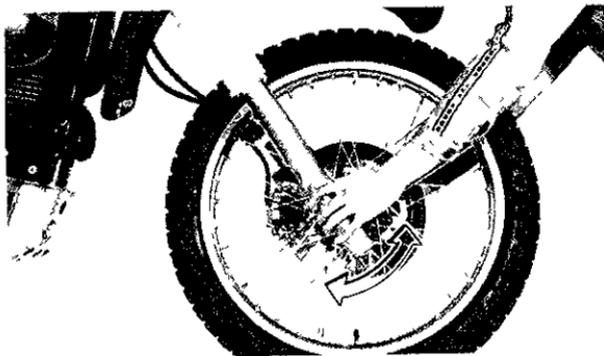

## WARNING:

**Securely support the motorcycle so there is no danger of it falling over.**

## Wheel bearings


If the wheel bearings in the front or rear wheel allow play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer inspect the wheel bearings. The wheel bearings should be inspected according to the Maintenance Schedule.

## Battery

Check the level of the battery electrolyte and see that the terminals are tight. Add distilled water if the electrolyte level is low.

**CAUTION:**

When inspecting the battery, be sure the breather pipe is routed correctly. If the breather pipe touches the frame or exits in such a way as to cause battery electrolyte or gas to exit onto the frame, structural and cosmetic damage to the motorcycle can occur.

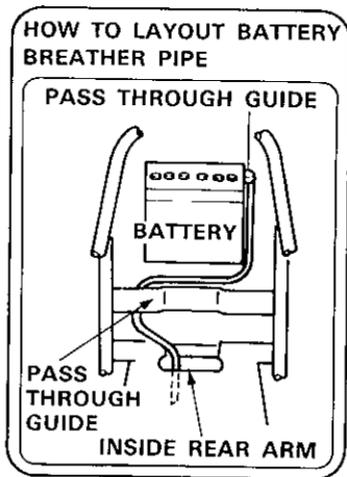**WARNING:**

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes or clothing.

Antidote: **EXTERNAL**-Flush with water. **INTERNAL**-Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg, or vegetable oil. Call a physician immediately.


Eyes: Flush with water for 15 minutes and get prompt medical attention. Batteries produce explosive gases. Keep sparks, flame, cigarettes etc., away. Ventilate when charging or using in an enclosed space. Always shield your eyes when working near batteries.

**KEEP OUT OF REACH OF CHILDREN.**

## Replenishing the battery fluid

A poorly maintained battery will deteriorate quickly. The battery fluid should be checked at least once a month

1. The level should be between the upper and lower level marks. Use only distilled water if refilling is necessary.

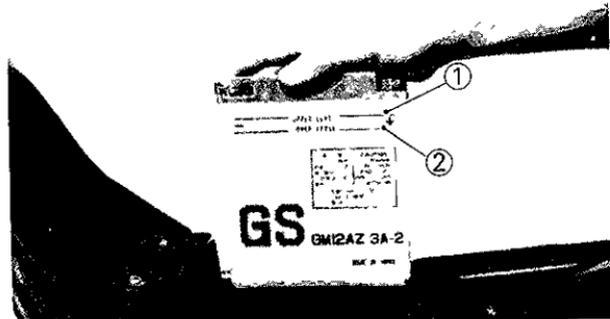

1 Upper level

2 Lower level

## CAUTION:

Normal tap water contains minerals which are harmful to a battery; therefore, refill only with distilled water.

## WARNING:

Battery fluid on the chain can cause premature failure and possibly an accident.

2. When the motorcycle will not be used for a month or longer, remove the battery and store it in a cool, dark place. Completely recharge the battery before reusing it.
3. If the battery will be stored for a longer period than the above, check the specific gravity of the fluid at least once a month and recharge the battery when it is too low.

4. Always make sure the connections are correct when putting the battery back in the motorcycle. The red lead is for the + terminal and the black lead is for the - terminal. Always connect the red lead first then connect the black lead. Make sure the breather pipe is properly connected and is not damaged or obstructed.

I 907

### Circuit breaker


This model is equipped with a circuit breaker. If any problem should occur to an electric component and cause a short circuit, this breaker works to shut off the current. If the current is thus shut off by the breaker, perform the following procedure:

1. Turn off the ignition switch and the switch in the circuit in question
2. Push in the breaker knob.

### CAUTION

**Wait 30 seconds before resetting the circuit breaker.**

- 3 Turn on the switches and see if the electrical device operates. If the circuit breaker interrupts the circuit again, consult a Yamaha dealer.


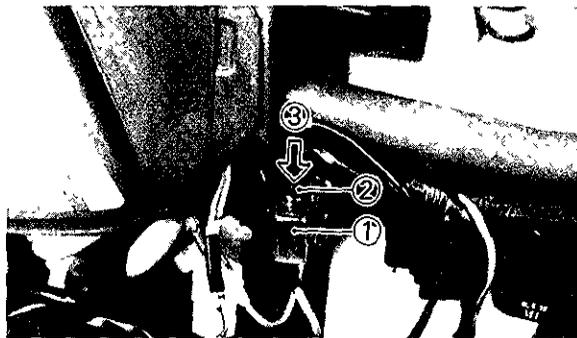


1 Circuit breaker 2 Breaker knob 3 Push


## Replacing the headlight bulb

This motorcycle is equipped with a quartz bulb headlight. If the headlight bulb burns out, replace the bulb as follows:


1. Remove the headlight cowl and headlight unit assembly.

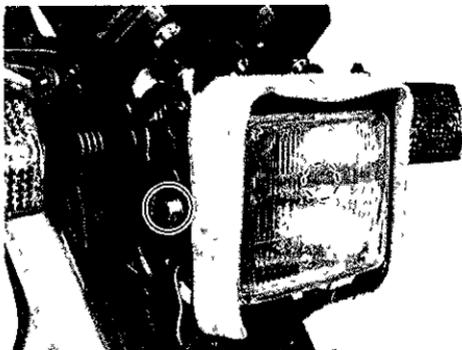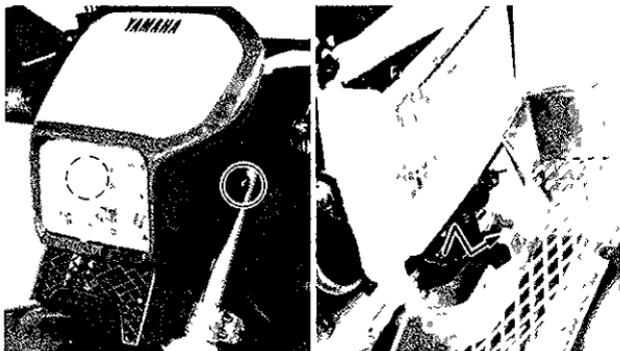

2. Disconnect the lead wires, and remove the light unit assembly

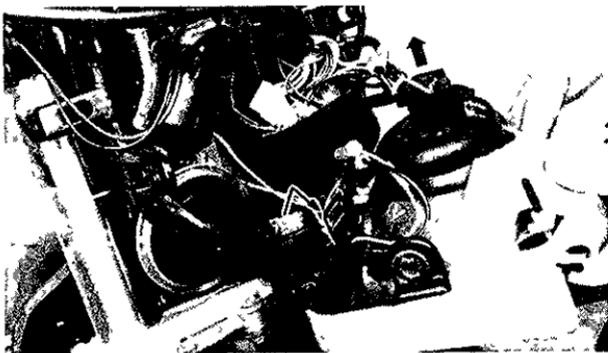

3. Turn the bulb holder counterclockwise and remove the defective bulb.

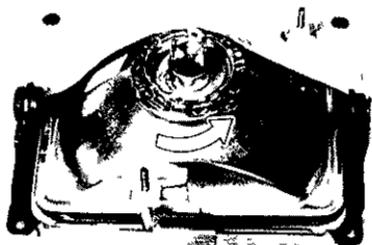

U 660

**WARNING:**


Keep flammable products or your hands away from the bulb while it is on, it will be hot. Do not touch the bulb until it cools down.

- 4 Slip a new bulb into position and secure it in place with the bulb holder.

U 341

**CAUTION:**

Avoid touching the glass part of the bulb. Keep it free from oil; otherwise, the transparency of the glass, life of the bulb, and illuminous flux will be adversely affected. If oil gets on the bulb, throughly clean it with a cloth moistened with alcohol or lacquer thinner.

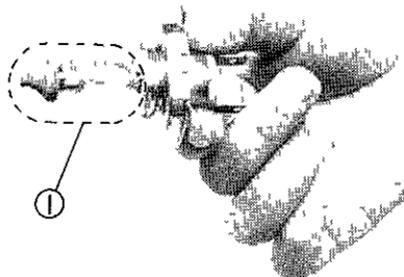

- 1 Don't touch

5. Reinstall the light unit assembly and headlight cowl. Adjust the headlight beam if necessary

I-809

## Headlight beam adjustment


U-343

### CAUTION

For the headlight beam adjustment, be sure to proceed as follows; (It is advisable to have a Yamaha dealer make this adjustment.)

1. Horizontal adjustment:  
To adjust the beam to the left, turn the adjusting screw clockwise.  
To adjust the beam to the right, turn the screw counterclockwise.


2. Vertical adjustment:  
To raise the beam, turn the adjusting screw clockwise.  
To lower the beam, turn the screw counterclockwise.

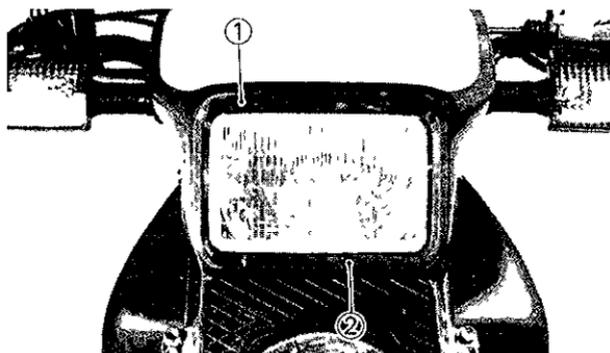


1 Horizontal adjusting screw    2 Vertical adjusting screw

## Taillight bulb replacement

1. Remove the seat and rear cover.

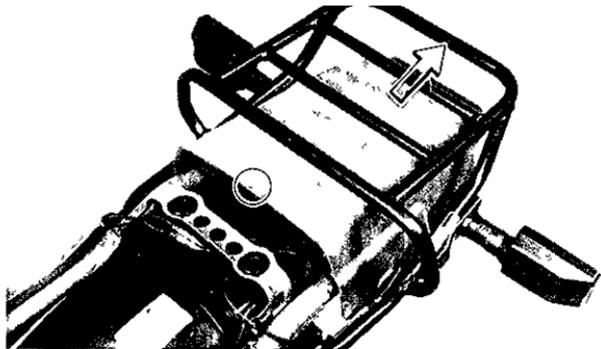

2. Remove the tool box.
3. To remove the socket, turn it approximately 30° counterclockwise.

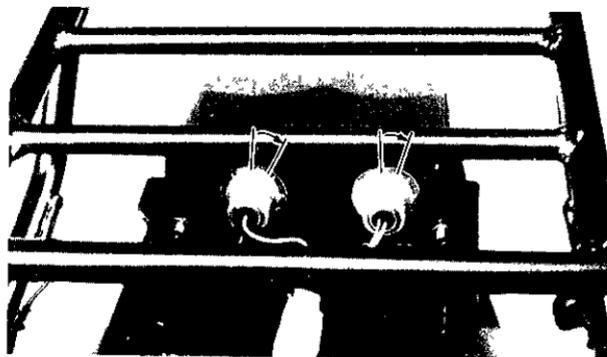


4. Turn the bulb counterclockwise and remove the defective bulb.
5. Push a new bulb into position and turn it clockwise.
6. To install the socket, reverse the removal procedure.

## Front wheel removal

1. Elevate the front wheel by placing a suitable stand under the engine.
2. Remove the wire holder and speedometer cable.
3. Remove the disc cover.



4. Remove the cotter pin and wheel axle nut.

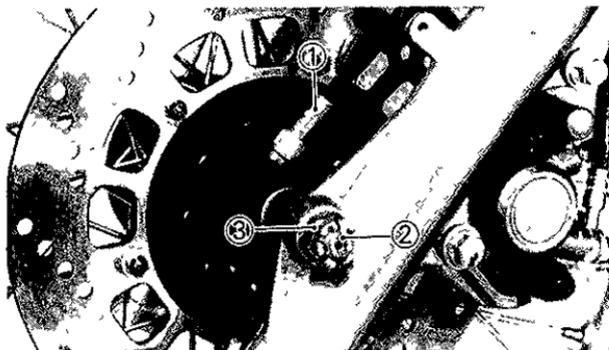

1 Speedometer cable 2 Cotter pin 3 Axle nut

5. Loosen the wheel axle holder nuts.
6. Remove the axle and the front wheel. Make sure the motorcycle is properly supported.



U 054

**NOTE:** \_\_\_\_\_

Do not depress the brake lever when the disc is off the caliper as the brake pads will be forced shut.


J 216

### Front wheel installation

When installing the front wheel, reverse the removal procedure.

Pay attention to the following points:

- 1 Make sure the wheel hub and the speedometer clutch assembly are installed with the projections meshed into the slots.

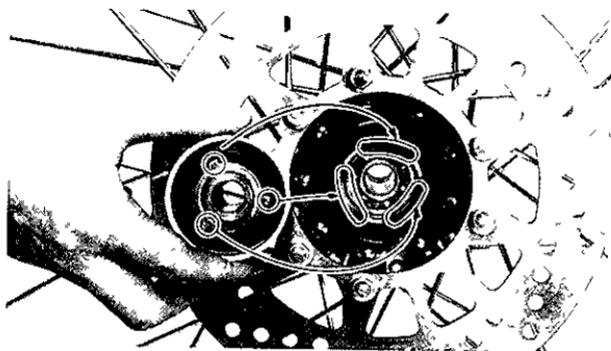

2. Make sure the projecting portion (torque stopper) of the speedometer housing is positioned correctly.



3. Make sure the axle nut is properly torqued, and a new cotter pin is installed.

U-647


**WARNING:**

Always use a new cotter pin on the axle nut.

Axle nut torque.  
105 Nm (10.5 m•kg, 75 ft•lb)

4. Before tightening the holder nuts, compress the front forks several times to check for proper fork operation.

5. Tighten the axle holder nuts; first the upper and then lower ones.

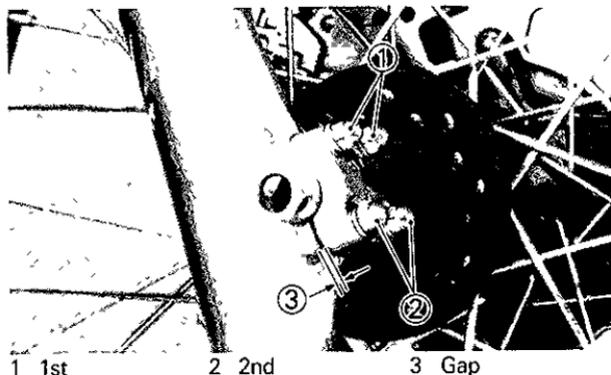

Axle holder nut torque:  
8 Nm (0.8 m•kg, 5.8 ft•lb)


## Rear wheel removal

U 662


### WARNING:

It is advisable to have a Yamaha dealer service the rear wheel.


1. Elevate the rear wheel by placing a suitable stand under the engine.
2. Remove the brake adjuster and brake rod from the brake cam lever.
3. Remove the rear arm end screws.
4. Remove the cotter pin from the axle nut and loosen the axle nut and chain pullers

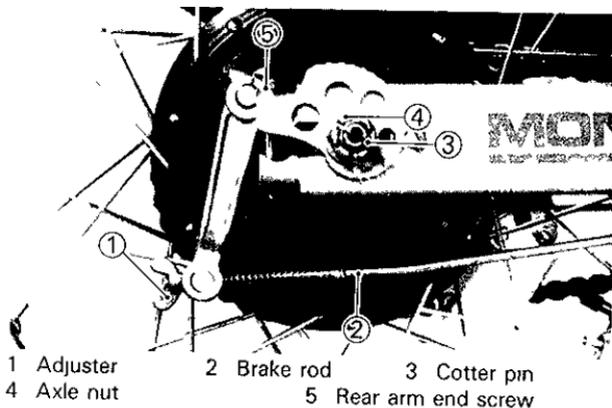

5. Push the wheel forward and remove the drive chain.

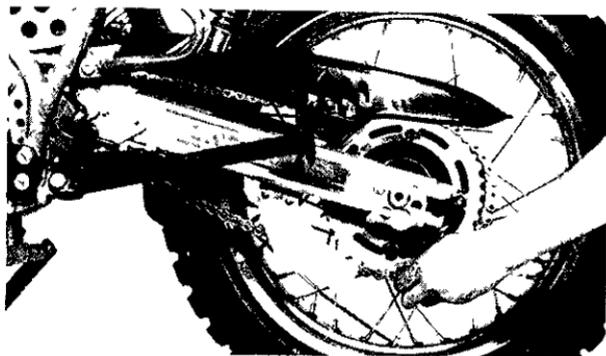

6. Remove the wheel assembly backward.

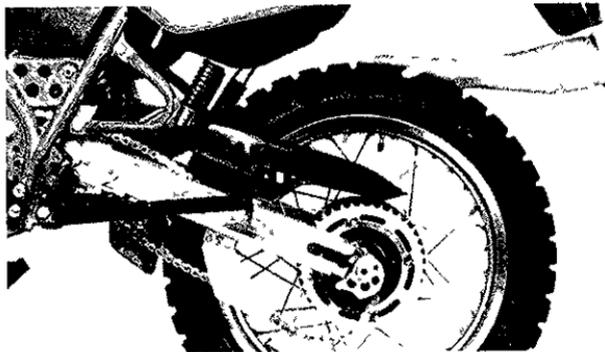

J-309


### **Rear wheel installation**

When installing the rear wheel, reverse the removal procedure.

Pay attention to the following points.

1. When connecting the chain, make certain the closed end of the master link clip is facing the direction of rotation.

2. Be sure the swingarm boss correctly engages the locating slot on the brake shoe plate.

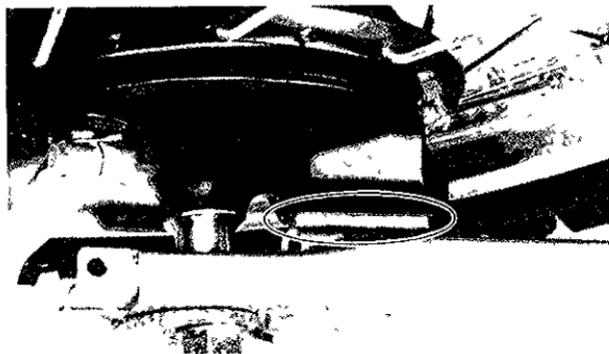

3. Adjust the drive chain.
4. Make sure the axle nut is properly torqued, and a new cotter pin is installed.

**WARNING:**

**Always use a new cotter pin on the axle nut.**

Axle nut torque:  
105 Nm (10.5 m•kg, 75 ft•lb)

5. Adjust the rear brake. (See page 6-17.)

**WARNING:**

**Check the operation of the brake light after adjusting the rear brake.**

**Troubleshooting**

Although Yamaha motorcycles receive a rigid inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems can cause poor starting and a loss of power. The troubleshooting chart describes a quick, easy procedure for checking these systems.

If your motorcycle requires any repair, bring it to a Yamaha dealer. The skilled technicians at a Yamaha dealer have the tools, experience, and know-how to properly service your motorcycle. Use only genuine Yamaha parts on your motorcycle. Imitation parts may look like Yamaha parts, but they are often inferior. Consequently, they have a shorter service life and can lead to expensive repair bills.

# Troubleshooting chart


U 663

## **WARNING:**

Never check the fuel system while smoking or in the vicinity of an open flame


### 1 Fuel

Check if there is fuel in the fuel tank

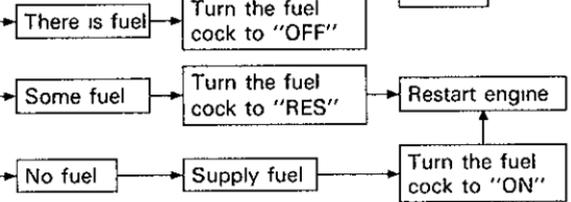


### 2 Compression

 Kick the kick lever to see if there is compression




### 3 Ignition

Remove spark plug(s) and check electrode

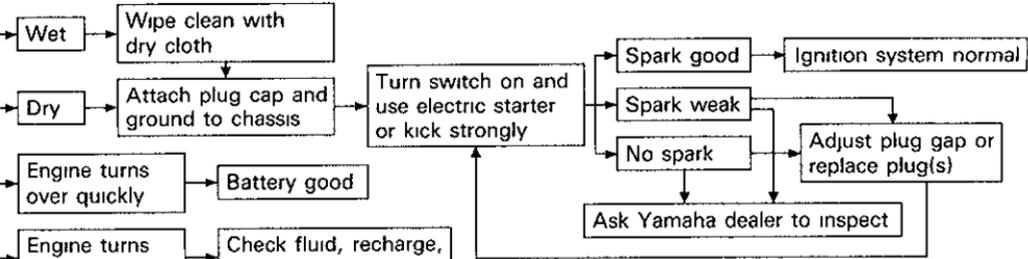

### 4 Battery

Use electric starter

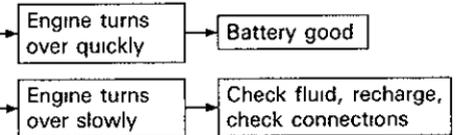

## CLEANING AND STORAGE

### A. CLEANING

Frequent thorough cleaning of your motorcycle will not only enhance its appearance but will improve its general performance and extend the useful life of many components

1. Before cleaning the motorcycle:
  - a. Block off the end of exhaust pipe to prevent water entry; a plastic bag and strong rubber band may be used.
  - b. Make sure the spark plug(s) and all filler caps are properly installed.
2. If the engine case is excessively greasy, apply degreaser with a paint brush. Do not apply degreaser to the chain, sprockets, or wheel axles.
3. Rinse the dirt and degreaser off with a garden hose, use only enough pressure to do the job.

### CAUTION:

---

Excessive hose pressure may cause water seepage and contamination of wheel bearings, front forks, brakes and transmission seals. Many expensive repair bills have resulted from improper high pressure detergent applications such as those available in coin-operated car washers.

---

4. Once the majority of the dirt has been hosed off, wash all surfaces with warm water and mild, detergent-type soap. An old tooth brush or bottle brush is handy for hard-to-get-to places.
5. Rinse the motorcycle off immediately with clean water and dry all surfaces with a chamois, clean towel, or soft absorbent cloth.
6. Dry the chain and lubricate it to prevent rust.

7. Clean the seat with a vinyl upholstery cleaner to keep the cover pliable and glossy.
8. Automotive-type wax may be applied to all painted and chrome-plated surfaces. Avoid combination cleaner-waxes. Many contain abrasives which may mar the paint or protective finish. When finished, start the engine and let it idle for several minutes.

K-012

## **B. STORAGE**

Long term storage (60 days or more) of your motorcycle will require some preventive procedures to guard against deterioration. After thoroughly cleaning the motorcycle, prepare for storage as follows:

1. Drain the fuel tank, fuel lines, and carburetor float bowl(s).
2. Remove empty fuel tank, pour a cup of SAE 10W30 or 20W40 motor oil in tank, shake the tank to coat the inner surfaces thoroughly and drain off the excess oil. Reinstall the tank.
3. Remove the spark plug, pour about one tablespoon of SAE 10W30 or 20W40 motor oil in the spark plug hole and reinstall the spark plug. Turn the engine over several times (ground spark plug lead wires) to coat the cylinder walls with oil.

**WARNING:** \_\_\_\_\_

**When using the starter motor to crank the engine, remove the spark plug wires, and ground them to prevent sparking.**

---

4. Remove the drive chain. Thoroughly clean the chain with kerosene and lubricate. Reinstall the chain or store it in a plastic bag (tied to frame for safe-keeping).
5. Lubricate all control cables.
6. Block up the frame to raise both wheels off the ground.
7. Tie a plastic bag over the exhaust pipe outlet to prevent moisture from entering
8. If storing in a humid or salt-air atmosphere, coat all exposed metal surfaces with a light film of oil. Do not apply oil to any rubber parts or the seat cover

9. Remove the battery and charge it. Store it in a dry place and recharge it once a month. Do not store the battery in an excessively warm or cold place (less than 0°C(30°F) or more than 30°C(90°F)).

U 058

**NOTE:** \_\_\_\_\_

Make any necessary repairs before storing the motorcycle.

---

## SPECIFICATIONS

Model	XT600ZS
<b>Dimension:</b> Overall length Overall width Overall height Seat height Wheel base Minimum ground clearance	2,210 mm (87 0 in) 890 mm (35 0 in) 1,260 mm (49.6 in) 890 mm (35.0 in) 1,450 mm (57.1 in) 265 mm (10.4 in)
<b>Basic weight:</b> With oil and full fuel tank	175 kg (386 lb)
Minimum turning radius.	2,300 mm (90 6 in)
<b>Engine:</b> Type Model Cylinder arrangement	Air cooled 4-stroke, gasoline, SOHC 1VL Single cylinder

Model	XT600ZS
Displacement Bore × Stroke Compression ratio Starting system Lubrication system	595 cm <sup>3</sup> 95 × 84 mm (3 74 × 3 31 in) 8 5 1 Electric and kick starter Dry sump
Engine oil Type Capacity Periodic oil change With oil filter replacement Total amount Oil tank	SAE 20W40 type SE motor oil  1 9 L (1 7 Imp qt, 2.0 US qt) 2 0 L (1.8 Imp qt, 2.1 US qt) 2 4 L (2 1 Imp qt, 2 5 US qt) 1 6 L (1 4 Imp qt, 1.7 US qt)
Air filter:	Wet type element
Fuel Type Tank capacity Reserve amount	Regular gasoline 23 L (5 1 Imp gal, 6 1 US gal) 3 2 L (0 7 Imp gal, 0 8 US gal)
Carburetor: Type/manufacturer	Y27PV/TEIKEI

Model	XT600ZS
Spark plug: Type/manufacturer Gap	DPR7EA-9/NGK 0.8~0.9 mm (0.031~0.035 in)
Clutch type.	Wet, multi-disc
Transmission: Primary reduction system Primary reduction ratio Secondary reduction system Secondary reduction ratio Transmission type Operation	Gear 74/31 (2.387) Chain drive 40/15 (2.666) Constant mesh 5-speed Left foot operation
Gear ratio 1st 2nd 3rd 4th 5th	31/12 (2.583) 27/17 (1.588) 24/20 (1.200) 21/22 (0.954) 21/27 (0.777)
Chassis: Frame type Caster angle Trail	Diamond 27.25° 109 mm (4.29 in)

Model	XT600ZS
Tire Type Size — Front Rear	With tube 3 00S21-4PR 4.60S18-4PR
Brake Front brake type Operation Rear brake type Operation	Single, Disk brake Right hand operation Drum brake Right foot operation
Suspension: Front Rear	Telescopic fork Swing arm (Monocross suspension)
Shock Absorber Front Rear	Air, Coil spring, Oil damper Gas, Coil spring, Oil damper
Wheel travel Front Rear	255 mm (10 0 in) 235 mm (9 3 in)

Model	XT600ZS
Electrical Ignition system Generator system Battery type/capacity	CDI magneto Flywheel magneto GM12AZ/12V 12AH
Headlight type	Quarz bulb
Bulb wattage/quantity Headlight Tail/brake light Flasher light Auxiliary light Meter light	60W/55W 5W/21W × 2 21W × 4 3 4W 3 4W × 2
Indicator light wattage/quantity "NEUTRAL" "HIGH BEAM" "TURN"	3 4W 3.4W 3.4W

## **NOISE REGULATION (For Australia)**

This motorcycle was manufactured to comply with ADR 39 for motorcycle and moped noise.

Engine speed at maximum power:


6,500 rpm

Stationary noise level

87.1 dB (A)

# MEMO

# WIRING DIAGRAM

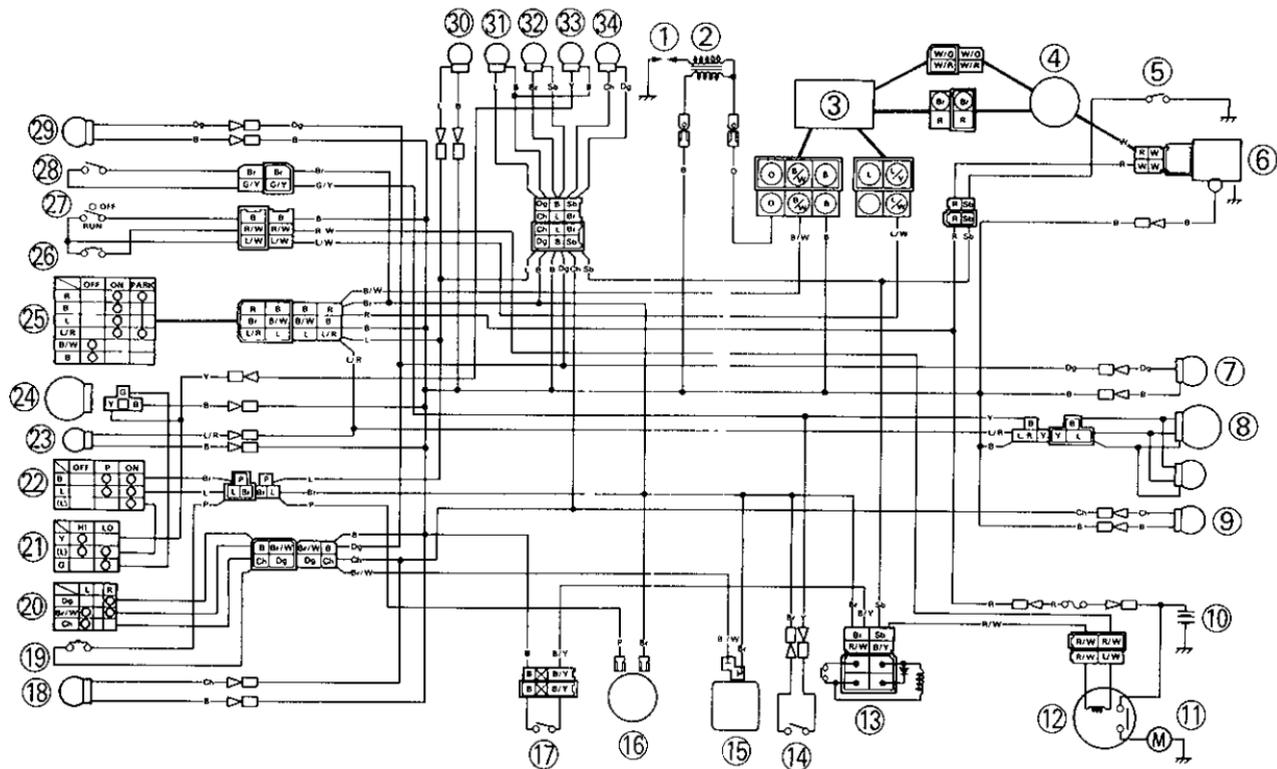

- 1 Spark plug
- 2 Ignition coil
- 3 CDI unit
- 4 AC magneto
- 5 Neutral switch
- 6 Rectifier/Regulator
- 7 Rear flasher light (R)
- 8 Taillight
- 9 Rear flasher light (L)
- 10 Battery
- 11 Starting motor
- 12 Starter relay
- 13 Relay
- 14 Rear brake switch
- 15 Flasher relay
- 16 Horn
- 17 Clutch switch
- 18 Front flasher light (L)
- 19 "HORN" switch
- 20 "TURN" switch
- 21 "LIGHTS" (Dimmer) switch
- 22 "LIGHTS" switch
- 23 Auxiliary light
- 24 Headlight
- 25 Main switch
- 26 "START" switch
- 27 "ENGINE STOP" switch
- 28 Front brake switch
- 29 Front flasher light (R)
- 30 Speedometer light
- 31 Tachometer light
- 32 "NEUTRAL" indicator light
- 33 "HIGH BEAM" indicator light
- 34 "TURN" indicator light


#### COLOR CODE

B	Black
Br	Brown
Ch	Chocolate
Dg	Dark green
G	Green
L	Blue
O	Orange
P	Pink
R	Red
Sb	Skyblue
W	White
Y	Yellow
B/W	Black/White
B/Y	Black/Yellow
Br/W	Brown/White
G/Y	Green/Yellow
L/R	Blue/Red
L/W	Blue/White
L/Y	Blue/Yellow
R/W	Red/White
W/G	White/Green
W/R	White/Red
Y/R	Yellow/Red

PRINTED IN JAPAN

86 2-0 2 x 1 ㊥

(英)

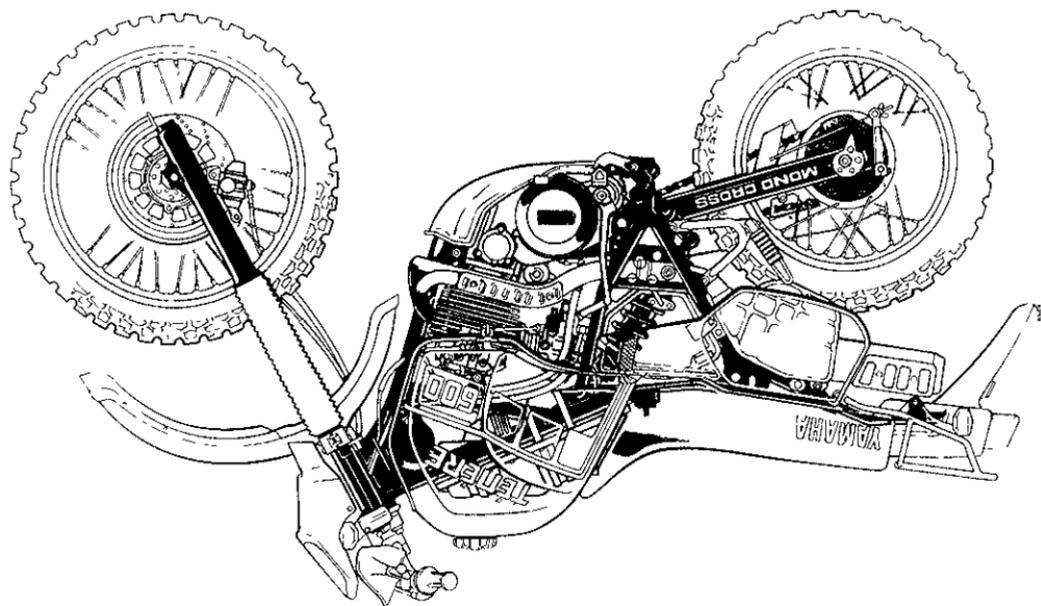

MANUAL DIST. F. COPPIETARIO

X1900ZS

WHMWHMWHM 